

# Maintenance

Please read "Importance of Maintenance" and "Maintenance Fundamentals" carefully before attempting any maintenance. Refer to "Specifications" for service data.

<b>Importance of Maintenance</b> .....	P. 41	<b>Engine Oil</b> .....	P. 64
<b>Maintenance Schedule</b> .....	P. 42	<b>Brakes</b> .....	P. 68
<b>Maintenance Fundamentals</b> .....	P. 45	<b>Side Stand</b> .....	P. 74
<b>Tools</b> .....	P. 55	<b>Throttle</b> .....	P. 75
<b>Removing &amp; Installing Body Components</b> ...	P. 56	<b>Crankcase Breather</b> .....	P. 76
Battery .....	P. 56	<b>Other Adjustments</b> .....	P. 77
Clip.....	P. 58	Adjusting the Headlight Aim .....	P. 77
Front Cover.....	P. 59		
Front Top Cover .....	P. 60		
<b>Spark Plug</b> .....	P. 61		