


Spark Plug ► Checking Spark Plug

2. Disconnect the spark plug cap from the spark plug.
3. Clean any dirt from around the spark plug base.
4. Remove the spark plug using the spark plug wrench provided in the tools.

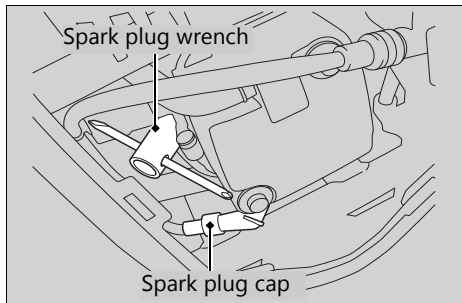


5. Inspect the electrodes and centre porcelain for deposits, erosion or carbon fouling.
 - If the erosion or deposit is heavy, replace the plug.

- Clean a carbon or wet-fouled plug with a plug cleaner, otherwise use a wire brush.

6. Check the spark plug gap using a wire-type feeler gauge.
 - If adjustment is necessary, bend the side electrode carefully.

The gap should be:

0.8 to 0.9 mm (0.03 to 0.04 in)

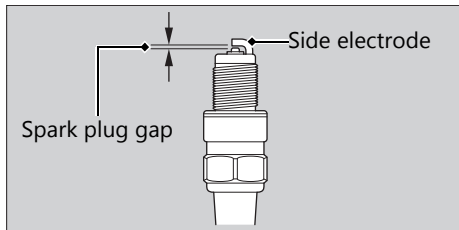

7. Make sure the plug washer is in good condition.