

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 79	<b>Electrical Trouble</b> .....	P. 83
<b>Warning Indicators On or Flashing</b> .....	P. 80	Battery Goes Dead .....	P. 83
PGM-FI (Programmed Fuel Injection)		Burned-out Light Bulb.....	P. 83
Malfunction Indicator Lamp (MIL) .....	P. 80	Blown Fuse .....	P. 90
<b>Other Warning Indications</b> .....	P. 81	<b>Unstable Engine Operation Occurs</b>	
Fuel Gauge Failure Indication .....	P. 81	<b>Intermittently</b> .....	P. 91
<b>Tyre Puncture</b> .....	P. 82		