


Headlight Bulb

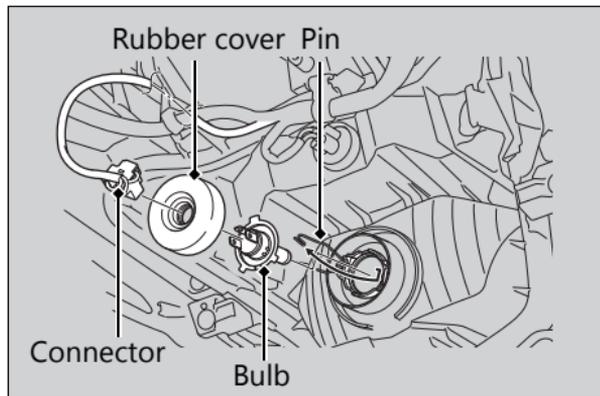

1. Remove the front top cover. ► P. 60
2. Remove the front cover. ► P. 59
3. Disconnect the connector.
4. Remove the rubber cover.
5. Slightly press down on the pin and turn it clockwise until it releases from the headlight bulb housing.
6. Remove the headlight bulb.
7. Install a new bulb and parts in the reverse order of removal.

Do not touch the glass surface with your fingers. If you touch the bulb with your bare hands, clean it with a cloth moistened with alcohol.