

Instruments (Continued)

Odometer

Total distance ridden.
When "-----" is displayed, go to your dealer for service.

Tripmeter A/B

Distance ridden since tripmeter was reset.

- ▶ To reset tripmeter, press and hold **SET** button while tripmeter displayed. When to reset tripmeter, the average fuel mileage is also reset.

When "----.-" is displayed, go to your dealer for service.

Air temperature gauge

Shows ambient temperature.

Display range: -10 to 50°C

- Below -10°C: "---" is displayed
- Above 50°C: 50°C flashes

❄ comes on when air temperature is below 3°C, and goes off when air temperature reaches 5°C after ❄ comes on.

Battery voltage

Current battery voltage.

Average fuel mileage A/B

Displays the average fuel mileage since the selected tripmeter was reset.

The average fuel mileage will be calculated based on value displayed on the tripmeter (A or B) selected. When each tripmeter is reset, each average fuel mileage will also reset.

Display range: 0.0 to 199.9 km/L

Less than 0.1 km/L: "0.0" is displayed

More than 199.9 km/L: "199.9" is displayed

- When the tripmeter A or B is reset: "----.-" is displayed.

When "----.-" is displayed except for the above-mentioned cases, go to your dealer for service.