

2 Press the **SET** button. The brightness level is set, and the display moves to the activating/deactivating of tripmeter A and average fuel mileage A automatic reset mode.

2 Press **SET** button. The activation/deactivation of automatic reset mode is set, and the display will return to the ordinary display.

4 To activate/deactivate of tripmeter A and average fuel mileage A automatic reset mode:

You can activate or deactivate the automatic reset mode by refuelling after 1st (E) segment of the fuel gauge start flashing. Activation is initially set after riding for 0.1 km (0.06 miles).

1 Press the **SEL** button to select "On" (activate) or "OFF" (deactivate) in the automatic reset mode.

