

## Engine is Not Stopped by the Idling Stop System While the Idling Stop Indicator is On

---

When the engine is not stopped by the Idling Stop system while the Idling Stop indicator is on, perform the followings.

**If the vehicle does not stop completely:**

Stop the vehicle completely. The Idling Stop system operates if the speed is only at 0 km/h (0 mph).

**If the throttle is not closed completely:**

Close the throttle completely.