

## TIRES

Check the tires for cuts, imbedded nails, or other sharp objects.

### NOTE

Tire pressure should be checked when the tires are COLD.

Check the tire pressure.

### TIRE PRESSURES:

Recommended pressure:

2.2 psi (0.15 kg/cm<sup>2</sup>, 15 kPa)

Minimum pressure: 1.7 psi (0.12 kg/cm<sup>2</sup>, 12 kPa)

### STANDARD TIRE CIRCUMFERENCE:

1,870 mm (73.6 in)

Maximum pressure: 3.6 psi (0.25 kg/cm<sup>2</sup>, 25 kPa)



## STEERING HEAD BEARINGS

### NOTE

Make sure the cables do not interfere with the rotation of the handlebar.

Raise the front wheel off the ground and make sure that the handlebar rotates freely.

If the handlebar moves unevenly, binds or has vertical movement, adjust the steering head bearing by turning the steering head adjusting nut with a pin spanner (Page 11–30).

