


ENGINE REMOVAL/INSTALLATION



Remove the front engine hanger bolts and plates.

FRONT ENGINE HANGER PLATE

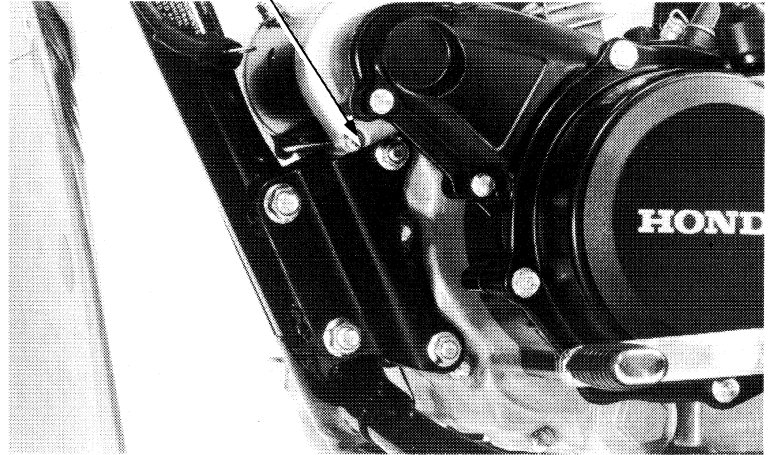

Remove the rear engine hanger bolts.
Remove the engine from the left side of the frame.

REAR ENGINE HANGER BOLT

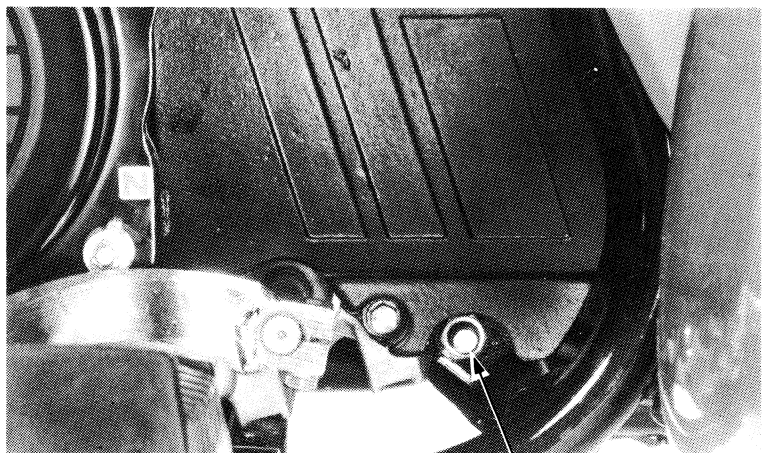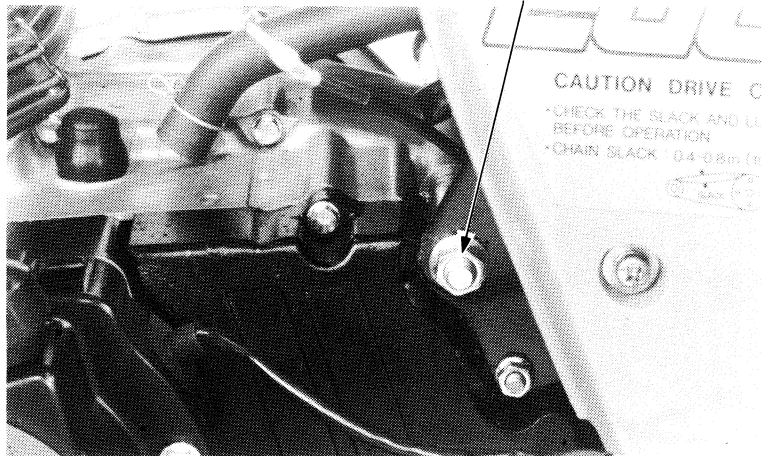

REAR ENGINE HANGER BOLT