


## CAMSHAFT REMOVAL


Remove the pulse cover.

PULSE COVER

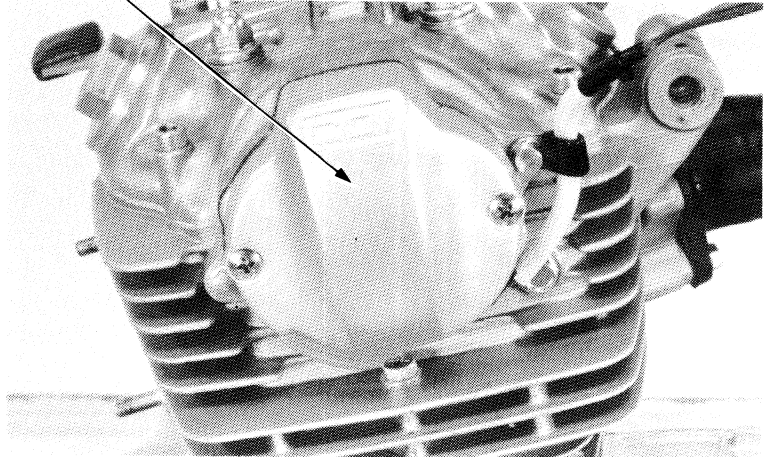

Remove the pulse generator screws, and remove the pulse generator.  
Remove the pulse rotor.

PULSE GENERATOR

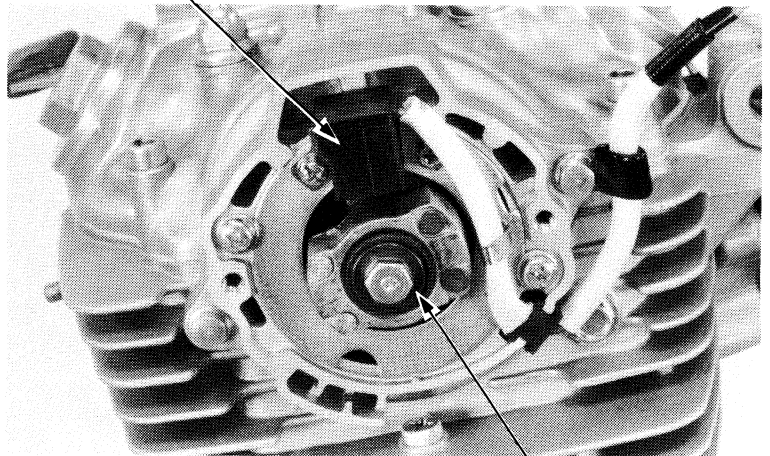

PULSE ROTOR

Remove the dowel pin.  
Remove the pulse base.

DOWEL PIN

PULSE BASE

