


Using a micrometer, measure the height of each cam lobe and inspect it for wear or damage.

SERVICE LIMIT:


INTAKE: 31.199 mm (1.2283 in)

EXHAUST: 30.798 mm (1.2125 in)

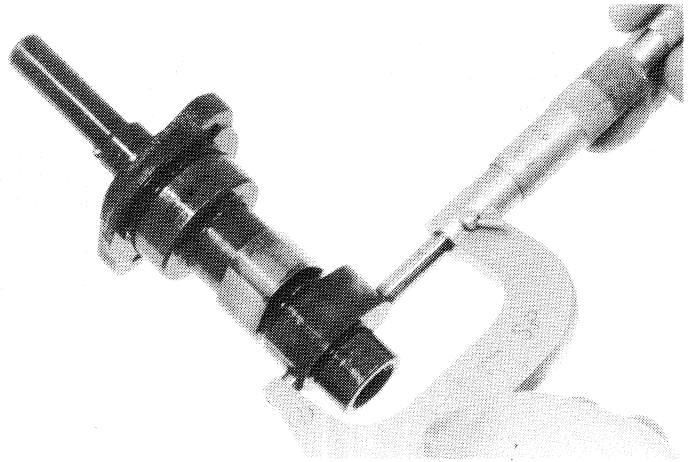

CYLINDER HEAD COVER REMOVAL

Remove the engine from the frame (Page 5-2).
Remove the 6 mm socket bolts and 8 mm cap nuts.
Remove the cylinder head cover and remove the camshaft bushing.

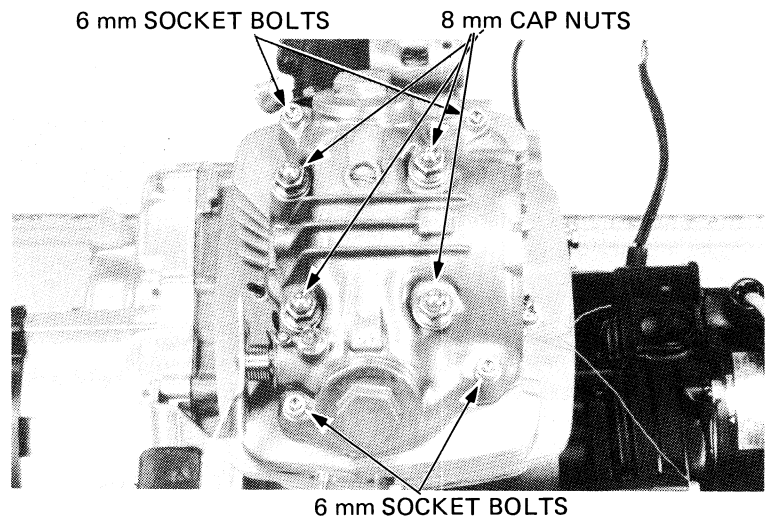

Remove the decompressor lever and spring by removing the decompressor lever guide bolt.

