


CLUTCH/OIL PUMP


CLUTCH LIFTER LEVER ASSEMBLY

Install the joint and joint pin on the lifter lever and secure them with the E-clip.

Install the clutch adjusting screw into the joint.

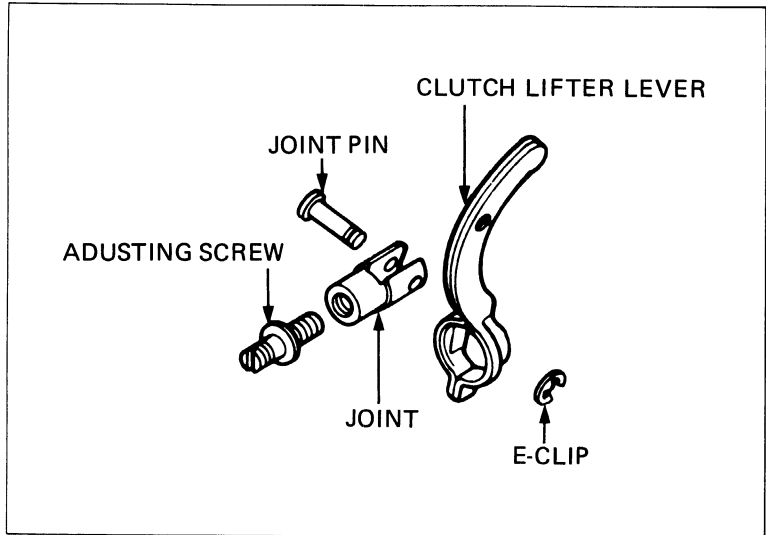

Install the spring and clutch lifter lever onto the right crankcase cover.

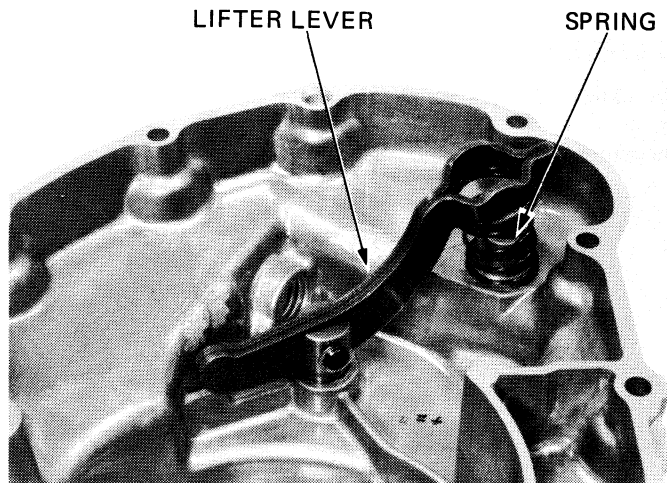

Slip the O-ring onto the clutch adjusting screw.

Install the lock nut and right crankcase cover protector.

Install the right crankcase cover (Page 8-21).

