


CLUTCH/OIL PUMP


Check for plate and disc warpage on a surface plate using a feeler gauge.

SERVICE LIMIT: 0.20 mm (0.008 in)

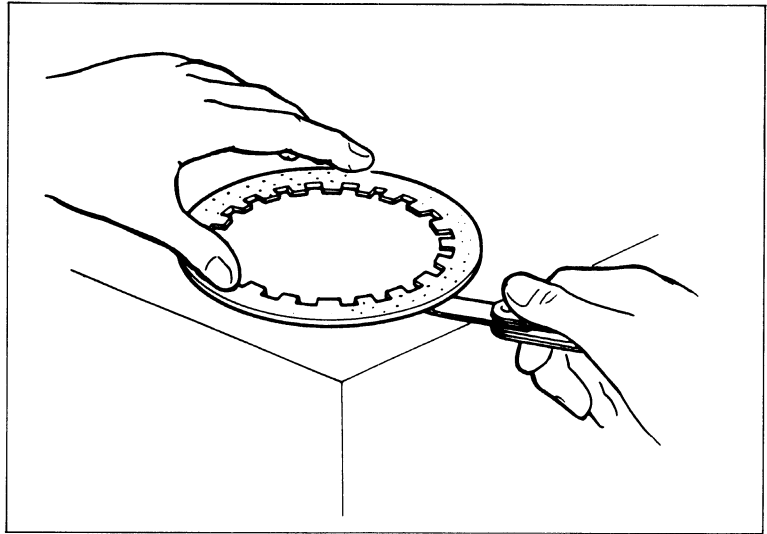

INSTALLATION

Install the thrust washer, clutch outer guide, and clutch outer.

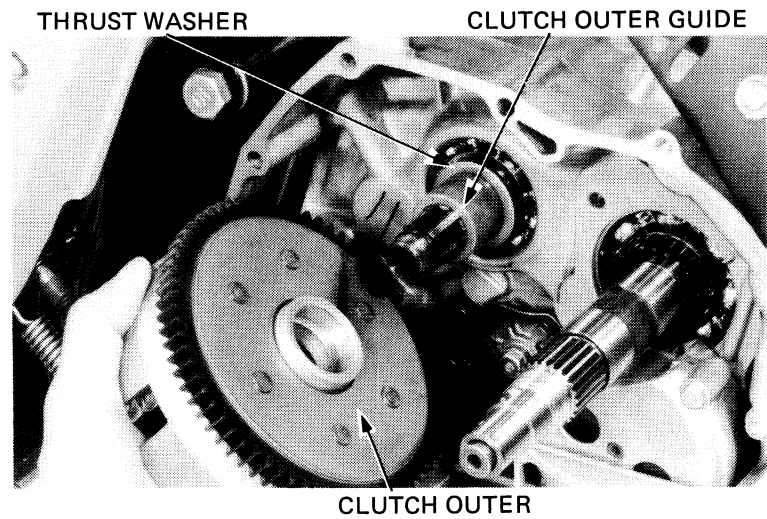

Assemble the clutch pressure plate, discs, plates and clutch center.

NOTE

- Stack the discs and plates alternately.
- Coat new clutch discs with engine oil.

