



CLUTCH/OIL PUMP

Install the inner and outer rotors.
Install the gasket and pump cover.

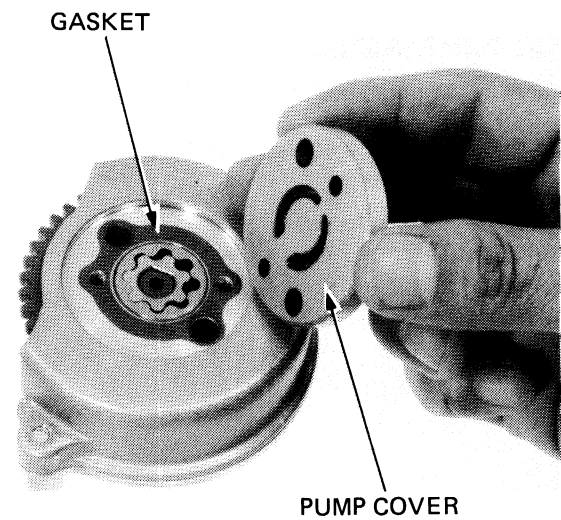

Tighten the screws.

Check the operation of the pump by rotating the pump gear by hand.

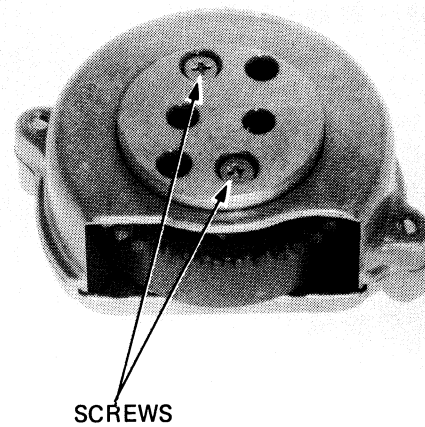

INSTALLATION

Install the O-rings onto the crankcase.

