



RECOIL STARTER/ALTERNATOR/STARTER CLUTCH

Apply grease to the pulley shaft and install the drive pulley by hooking the end of the spring on the drive pulley hook.

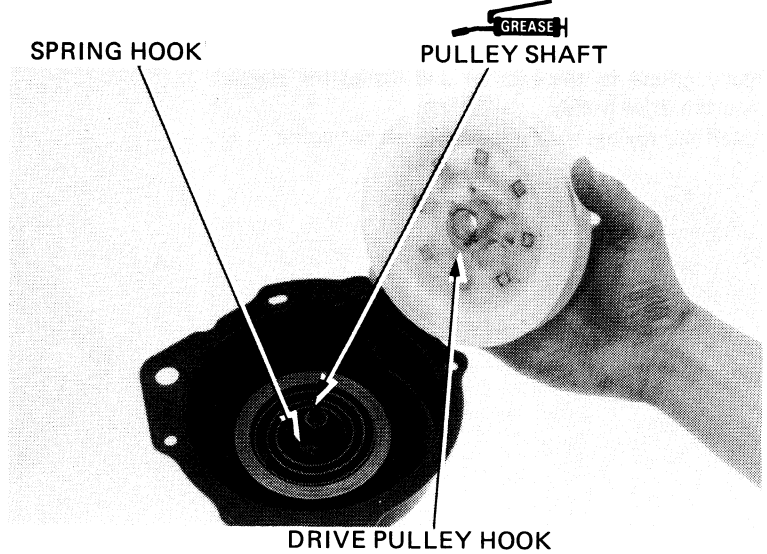

Preload the starter spring by turning the pulley 2 turns clockwise.

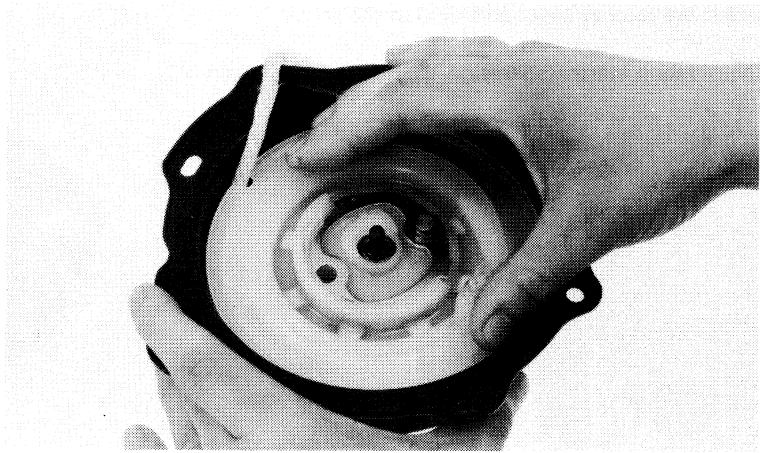

Route the rope end through the starter housing hole and install the handle.

Tie the rope end and install the handle cover.

