


ALTERNATOR

LEFT CRANKCASE COVER REMOVAL


Drain the engine oil (Page 2-2).
Remove the recoil starter (Page 9-2).
Hold the starter driven pulley with a screwdriver.
Remove the bolt attaching the starter driven pulley and the pulley.

STARTER DRIVEN PULLEY

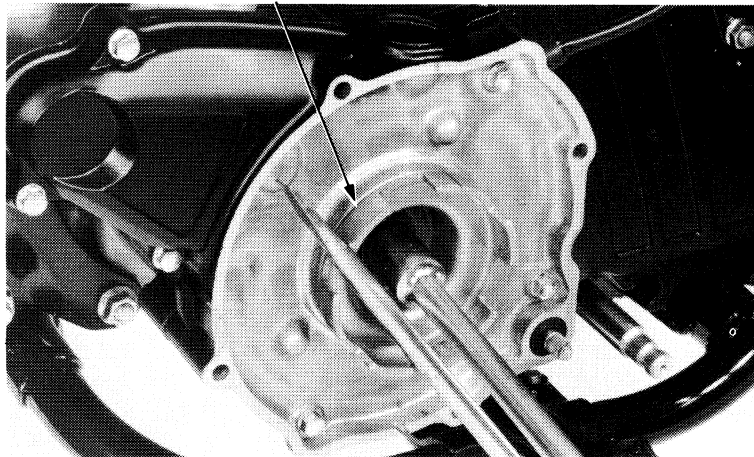

Disconnect the alternator coupler.

ALTERNATOR COUPLER

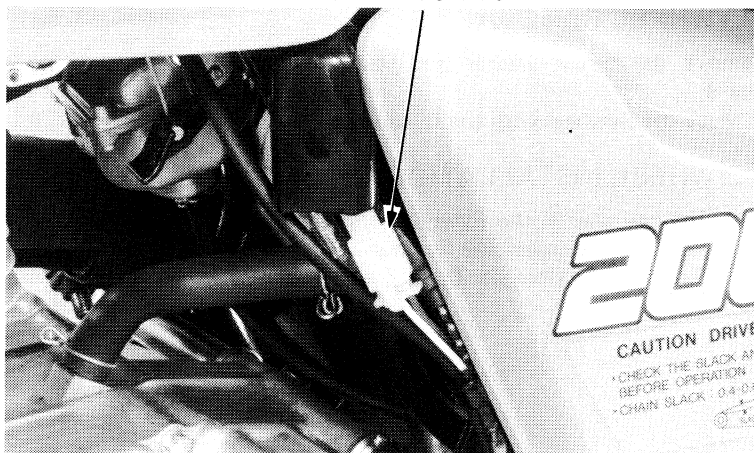

Remove the six bolts attaching the left crankcase cover and the cover.
Check the seals on the left crankcase cover and replace if necessary.

LEFT CRANKCASE COVER

