


FRONT WHEEL/SUSPENSION/BRAKE/STEERING

Remove the fork springs and washer.

Pour out the fork fluid by pumping the fork up and down several times.

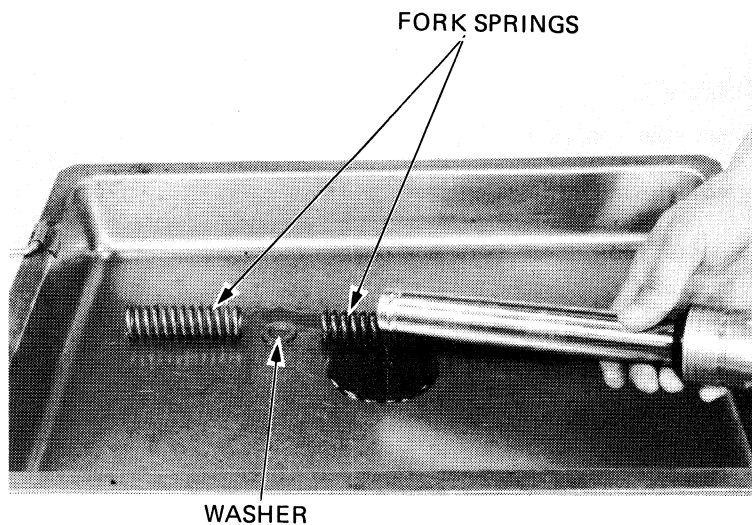


Hold the fork slider in a vise with soft jaws or a shop towel.
Remove the socket bolt with a hex wrench.

NOTE

Temporarily install the spring, washer and fork cap if difficulty is encountered in removing the bolt.

Remove the piston, rebound spring, then separate the slider and fork tube.

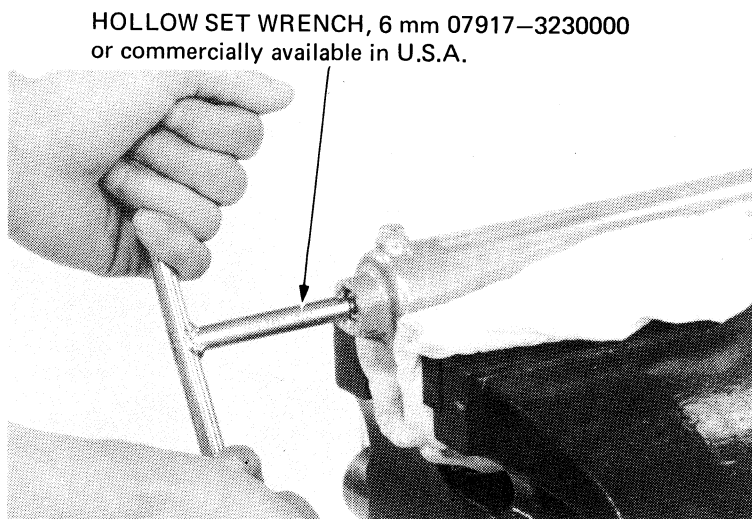

Remove the dust seal and the snap ring.
Remove the oil seal.

NOTE

Avoid damaging the inner and outer surfaces of the fork slider when removing the snap ring and oil seal.

