


STEERING STEM


REMOVAL

Remove the following: .

- headlight (Page 17-2).
- handlebar (Page 11-3).
- front wheel (Page 11-6).
- front forks (Page 11-21).
- front fender.

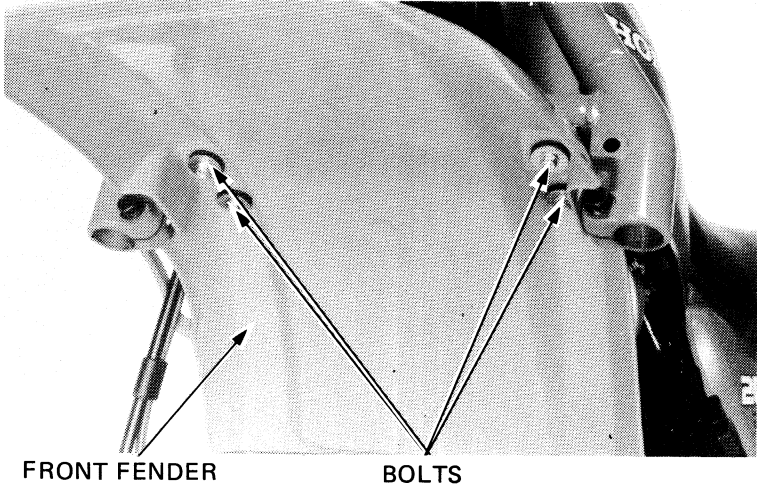

Remove the clips securing the headlight bracket and the bracket from the front fork.

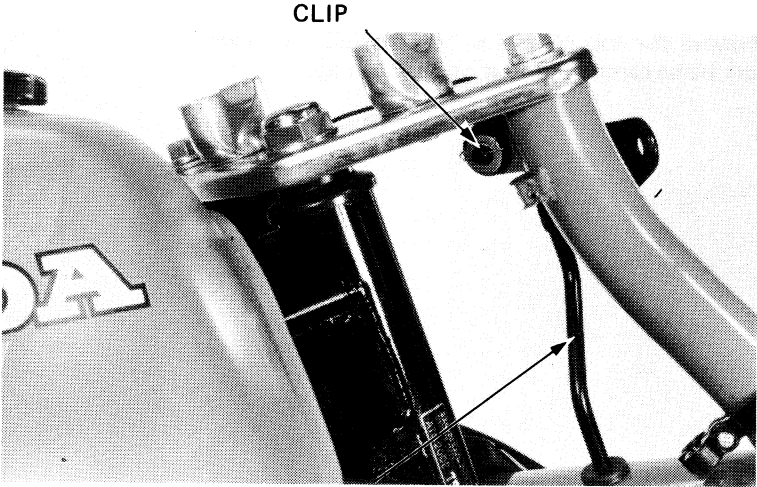

Remove the steering stem nut and fork bridge bolts.

Remove the fork bridge.

