



FRONT WHEEL/SUSPENSION/BRAKE/ STEERING

Remove the steering adjustment nut.

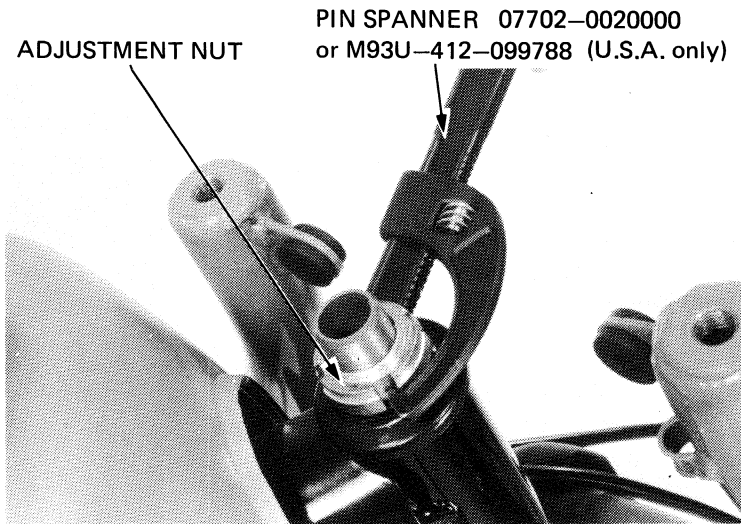

Remove the top cone race, ball bearings and front fork being careful not to drop the bearings.

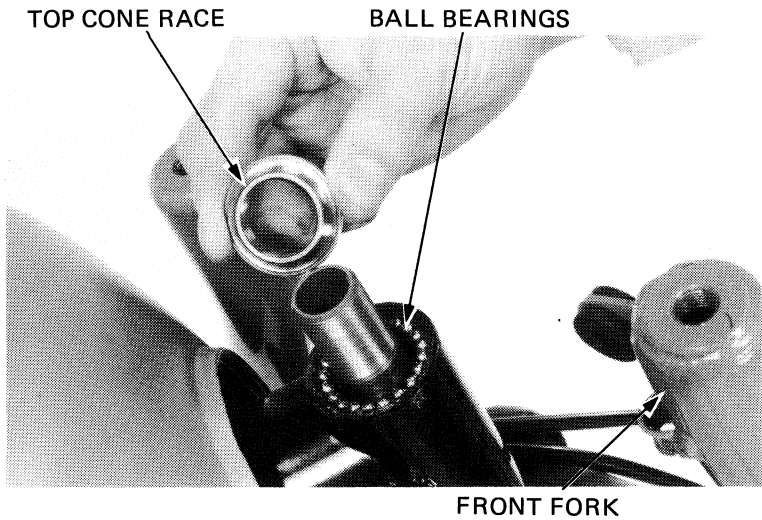

Check the ball races for wear or damage and remove if necessary.

