


## STARTER MOTOR

Install the rear cover aligning its slot with the brush holder pin.


Install the starter motor in the reverse order of removal.

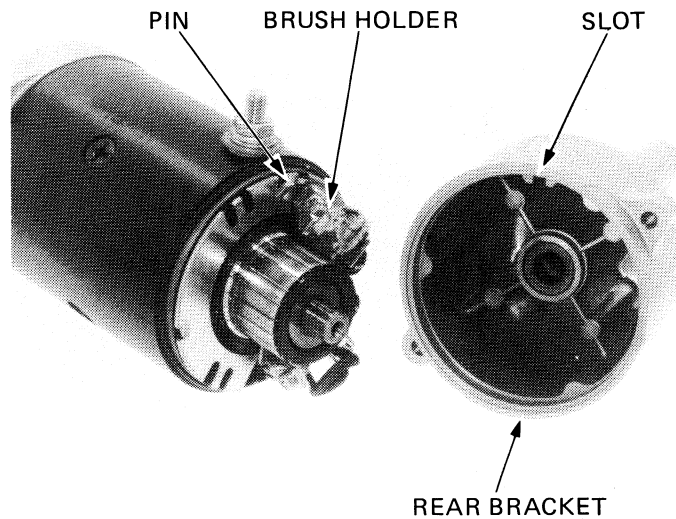

## STARTER RELAY SWITCH


### INSPECTION

Remove the rear fenders and tool box (Page 13-1). Depress the starter switch button with the ignition ON. The coil is normal if the starter relay switch clicks.

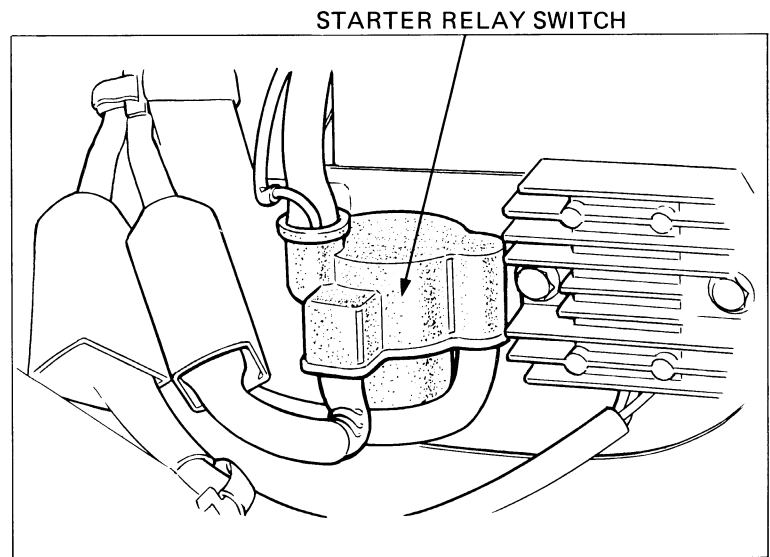

Connect an ohmmeter to the starter relay switch terminals.

Connect a 12 V battery to the switch cable terminals. The switch is normal if there is continuity.

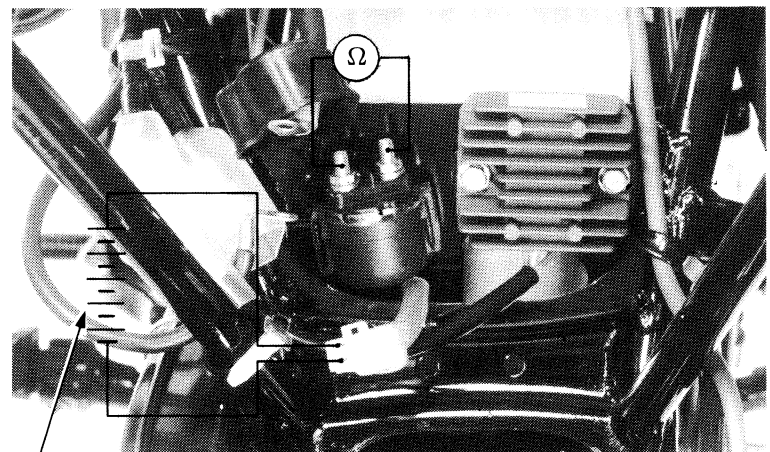

12V BATTERY