


TAILLIGHT

BULB REPLACEMENT

Remove the taillight lens by removing two screws.
Replace the bulb with a new one.

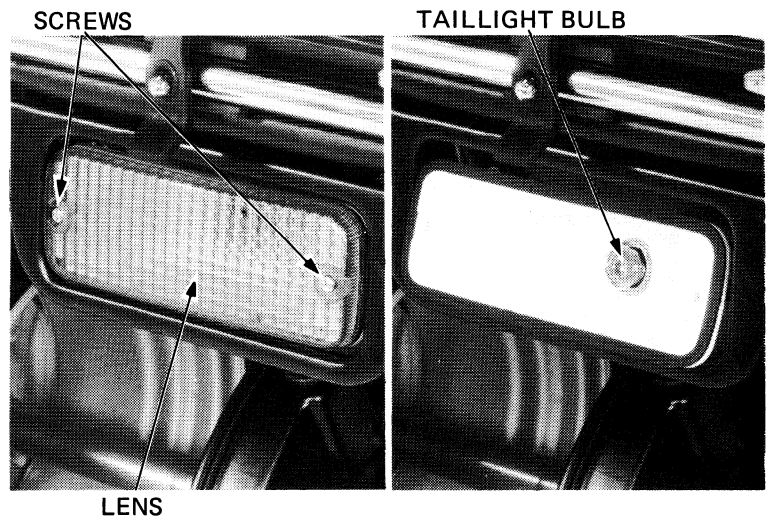

REMOVAL/INSTALLATION

Disconnect the taillight wire connector.

Open the tool box and remove the two bolts mounting the taillight unit and the taillight unit.

