



SERVICE INFORMATION	9 - 1
TROUBLESHOOTING	9 - 2
CRANKCASE SEPARATION	9 - 3
KICKSTARTER	9 - 4
TRANSMISSION	9 - 7
CRANKSHAFT	9 - 10
CRANKCASE ASSEMBLY	9 - 15

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- Fill the cavity between the double lips of the crankshaft oil seals with gasoline resistant grease. Check the lips for burs.
- Kickstarter, transmission and crankshaft service requires crankcase separation.

TOOLS

Special	
Crankcase disassembler	07953-9610000
Common	
Universal holder	07725-0030000
Attachment 32 x 35 mm	07746-0010100
Pilot 25 mm	07746-0040600
Attachment 52 x 55 mm	07746-0010400
Pilot 22 mm	07746-0041000
Attachment 37 x 40 mm	07746-0010200
Pilot 17 mm	07746-0040400
Attachment 42 x 47 mm	07746-0010300
Pilot 20 mm	07746-0040500
Attachment 62 x 68 mm	07746-0010500
Pilot 35 mm	07746-0040800