


Remove the four driven flange nuts.
Remove the sprocket from the flange.

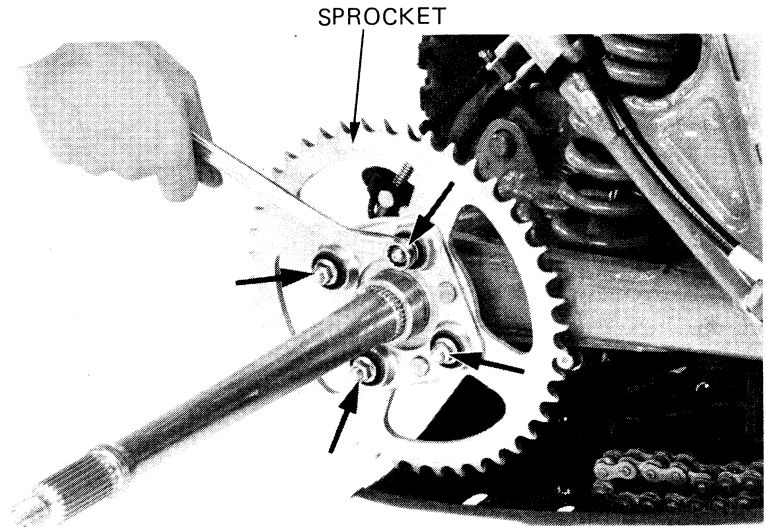


INSPECTION

Check the damper rubbers for damage.
Check the condition of the final driven sprocket teeth.
Replace the sprocket if it is worn or damaged or the damper rubbers are damaged.

NOTE

- If the driven sprocket is worn or damaged, the drive chain and the drive sprocket must be inspected.
- Never install a new drive chain on a worn sprocket or a worn chain on new sprockets. Both chain and sprockets must be in good condition or the replacement chain or sprockets will wear rapidly.

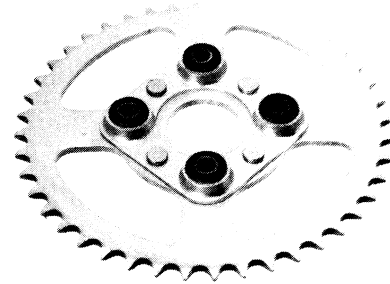

INSTALLATION

Install the sprocket on the flange and install with the four flange nuts.

**TORQUE: 18–25 N·m, (1.8–2.5 kg·m,
13–18 ft·lb)**

