

MAINTENANCE

MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. ATC's subjected to severe use, or ridden in unusually wet or dusty areas, require more frequent servicing. Items marked * should be serviced by an authorized Honda dealer, unless the owner has the proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

Perform the Pre-ride Inspection at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust L: Lubricate		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	TRANSMISSION OIL	2 YEARS: R		I	2-4
	AIR CLEANER	NOTE 2		C	2-5
	SPARK PLUG			I	2-6
*	CARBURETOR IDLE SPEED		I	I	2-6
	RADIATOR COOLANT	2 YEARS: R*		I	2-7
*	RADIATOR CORE	NOTE 3		I	2-8
*	COOLING SYSTEM			I	2-8
*	FUEL LINE	YEAR: I			2-8
*	FUEL STRAINER SCREEN	YEAR: C			2-9
*	THROTTLE OPERATION		I	I	2-10
	DRIVE CHAIN	NOTES 2, 3	I, L	i, L	2-10
	DRIVE CHAIN SLIDER			I	2-12
*	SUSPENSION			I	2-13
	SWING ARM BEARINGS		I, L	I, L	2-14
	BRAKE FLUID	2 YEARS: R	I	I	2-17
*	BRAKE PAD WEAR	YEAR: I			2-16
	BRAKE SYSTEM		I	I	2-14
*	CLUTCH SYSTEM		I	I	2-17
*	SPARK ARRESTER (U.S.A. ONLY)	NOTE 1		C	2-18
	NUTS, BOLTS, FASTENERS		I	I	2-20
	LIGHTING EQUIPMENT		I	I	2-19
	TIRES		I	I	2-19
*	STEERING HEAD BEARINGS	YEAR: I			2-19

NOTES: (1) U.S.A. only.

(2) Service more frequently when riding in dusty areas, sand or snow.

(3) Service more frequently after riding in very wet or muddy conditions.