


## AIR CLEANER

Remove the seat.  
Remove the clips attaching the air cleaner cover and remove the cover.



Loosen the connecting tube band screw.  
Remove the element holding bracket screw and element.

Remove the element from the holder.

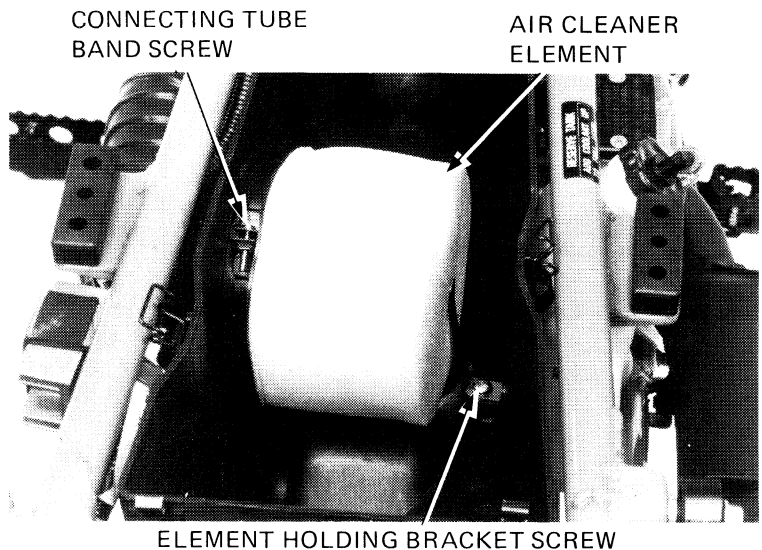

Wash the element in non-flammable or high flash point solvent, squeeze out the solvent thoroughly, and allow to dry.

**CAUTION**

*The element is made of several different materials bonded together; to prevent damaging the element, handle it gently.*

Soak the element in Honda 2-stroke oil or equivalent and gently squeeze out the excess.

**NOTES**

- Use commercially available air filter oil when riding dusty track.
- Apply air filter oil to whole surfaces of the element and rub it with both hands to saturate the oil in the element. Squeeze out excess oil and wipe oil off from the element surfaces with a dry cloth.

Apply a thin coat of grease to the sealing surface of the element and install the element holder into the air cleaner case.  
Install the air cleaner cover.

