


RADIATOR COOLANT

Place the ATC on level ground.

Check the coolant level of the reserve tank with the engine running at normal operating temperature. The level should be between the "F" and "L" level lines.

If necessary, fill the tank to the "F" level line with a 50/50 mixture of distilled water and anti-freeze.

"F" LEVEL LINE

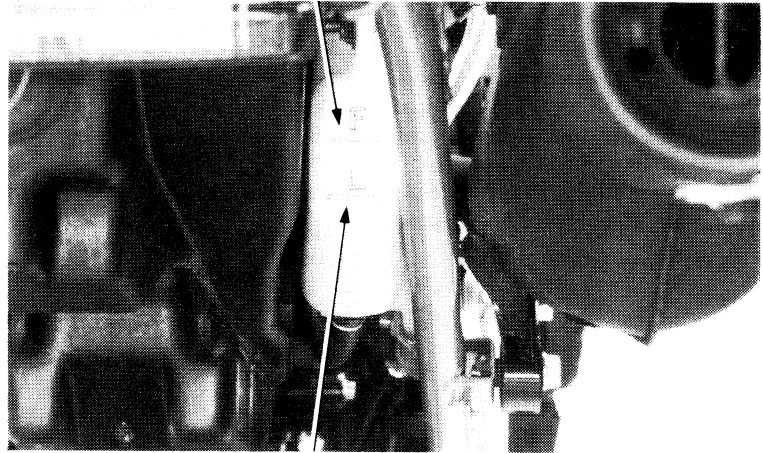

"L" LEVEL LINE


WARNING

Avoid scalding; never remove the radiator cap when the engine is hot. The coolant is under pressure.

If the reserve tank is empty, remove the radiator cap and fill the radiator with recommended coolant up to the filler neck.

Run the engine for 2–3 minutes to allow air to escape.

RADIATOR CAP

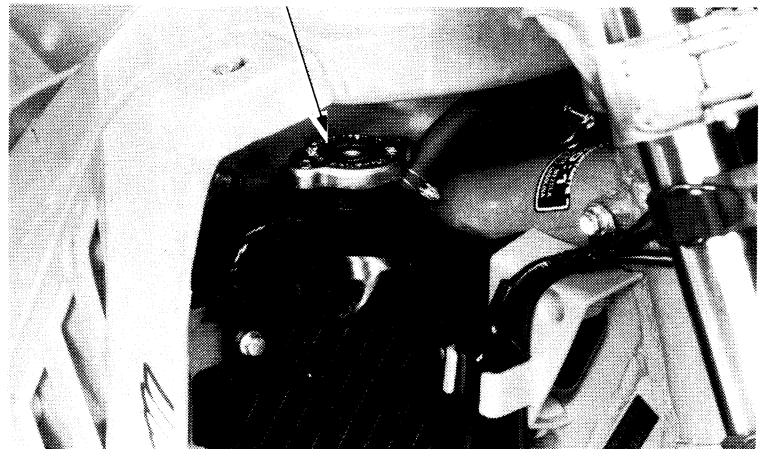

"F" LEVEL LINE

Fill the radiator with coolant and install the cap. Fill the reserve tank to the "F" level line and install the cap.

