

## MAINTENANCE


---

Apply MoS<sub>2</sub> paste to the linkage bushings through the grease fittings on the linkage pivots.

### NOTE

Use MoS<sub>2</sub> paste (containing more than 40% of molybdenum) as follows:

- Molykote® G-n Paste manufactured by Dow Corning U.S.A.
- HONDA Moly 45 (U.S.A.)
- Rocol paste manufactured by Sumico Lubricant Co., Ltd., Japan.
- Bel-Ray Moly-Lube MC-8, U.S.A.
- Other lubricants of equivalent quality.

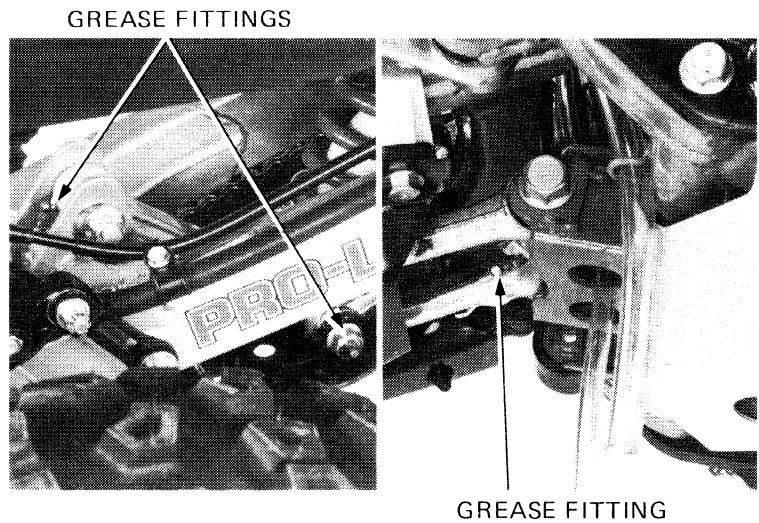


## SWING ARM BEARINGS

Raise the rear wheels off the ground with a jack or block under the engine.

Move the rear axle side ways with force to see if the wheel and swing arm bearing are worn.

Replace the bearings if there is any play.

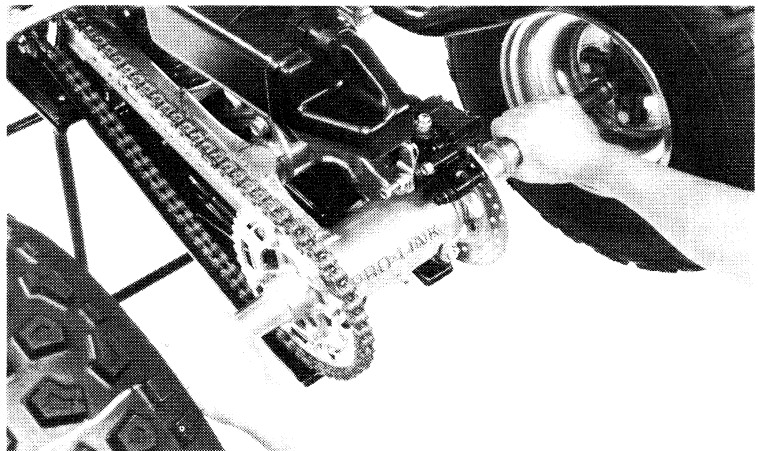

## BRAKE SYSTEM

Inspect the brake hoses and fittings for deterioration, cracks and signs of leakage. Tighten any loose fittings.

Replace hoses and fittings as required.

