


MAINTENANCE


To adjust the distance, loosen the lock nut and turn the adjuster.

Tighten the lock nut.

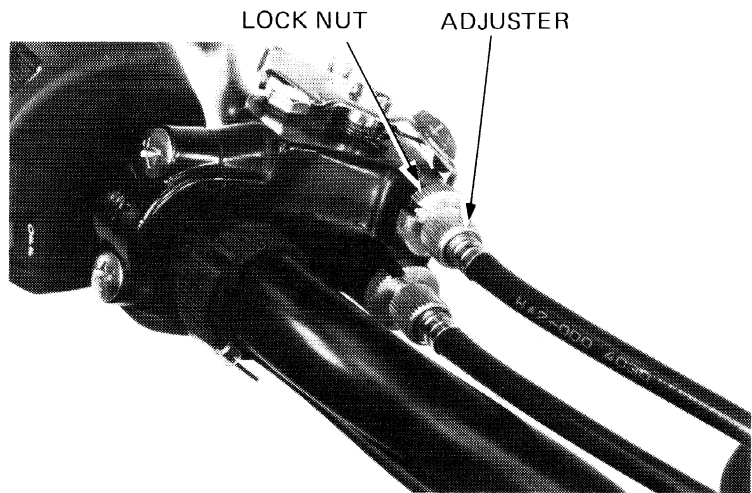

BRAKE PADS

Inspect the front and rear brake pads for wear.

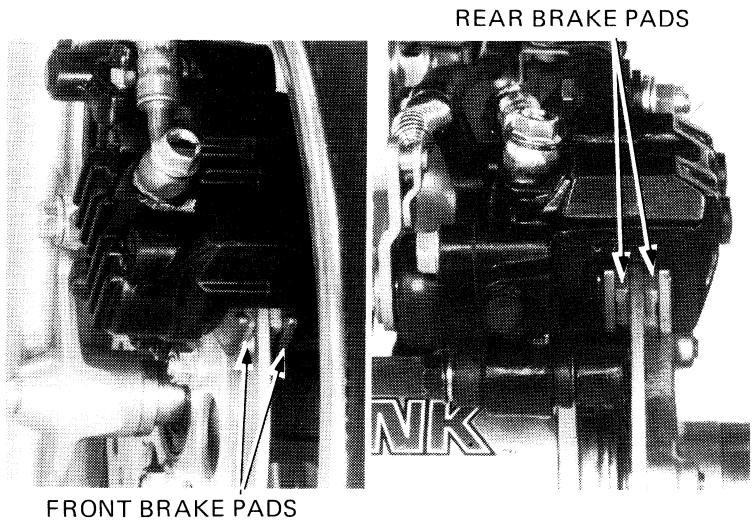

Replace the brake pads if wear groove on the pads reaches the edge of the brake disc.

CAUTION

Always replace the brake pads as a set to assure even disc pressure.

Refer to page 13-6 for brake pad replacement.

