

## LIGHTING EQUIPMENT

Apply the parking brake.  
Start the engine.

Check the headlight and taillight by operating the headlight ON-OFF switch and dimmer switch:  
Adjust the vertical beam by turning the adjusting screw.



VERTICAL BEAM ADJUSTING SCREW

## TIRES


Check the tire for cuts, imbedded nails, or other damage.

### NOTES

- Tire pressure should be checked when the tires are COLD.
- Raise the wheels off the ground when measuring tire circumferences.

Check the tire pressure and measure the tire circumference. Adjust accordingly.

	Recom- mended pressure	Min. pressure	Max. pressure	Standard tire circum- ference
Front	4.3 psi (30 kPa, 0.3 kg/cm <sup>2</sup> )	3.9 psi (27 kPa, 0.27 kg/cm <sup>2</sup> )	4.7 psi (33 kPa, 0.33 kg/cm <sup>2</sup> )	1,844.0 mm (72.6 in)
Rear	3.6 psi (25 kPa, 0.25 kg/cm <sup>2</sup> )	3.2 psi (22 kPa, 0.22 kg/cm <sup>2</sup> )	4.0 psi (28 kPa, 0.28 kg/cm <sup>2</sup> )	1,565.0 mm (61.6 in)

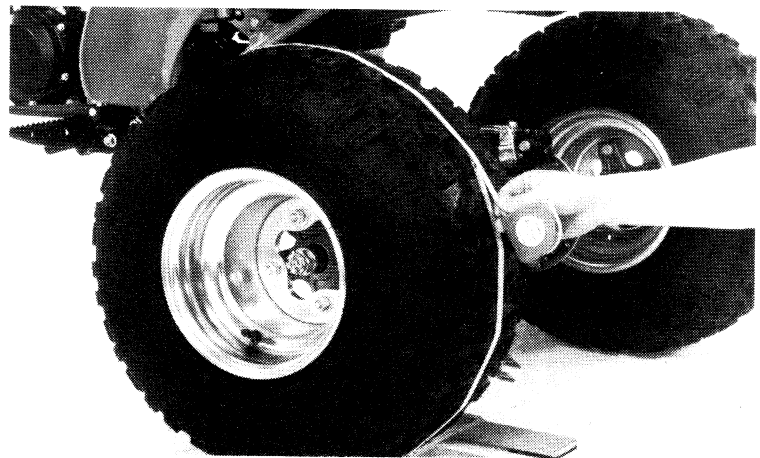

## STEERING HEAD BEARINGS

### NOTE

Make sure the cables do not interfere with the rotation of the handlebar.

Raise the front wheel off the ground and make sure that the handlebar rotates freely.

If the handlebar moves unevenly, binds or has vertical play adjust the steering head bearing (Page 10-22).

If after adjustment the handlebar still move unevenly binds or has vertical play, inspect the steering head bearings and replace if necessary (Page 10-22).

