

NUTS, BOLTS, FASTENERS

Tighten bolts, nuts and fasteners at regular intervals shown in the Maintenance Schedule.

Check that all chassis nuts and bolts are tightened to their correct torque values (Page 1-6). Check that all cotter pins and safety clips are in place.

CONTROL CABLE LUBRICATION

Periodically, disconnect the throttle, choke and clutch cables at their upper ends.

Thoroughly lubricate the cables and their pivot points with a commercially available cable lubricant.