


FUEL TANK

REMOVAL


Remove the seat/rear fender by releasing the seat latch lever.

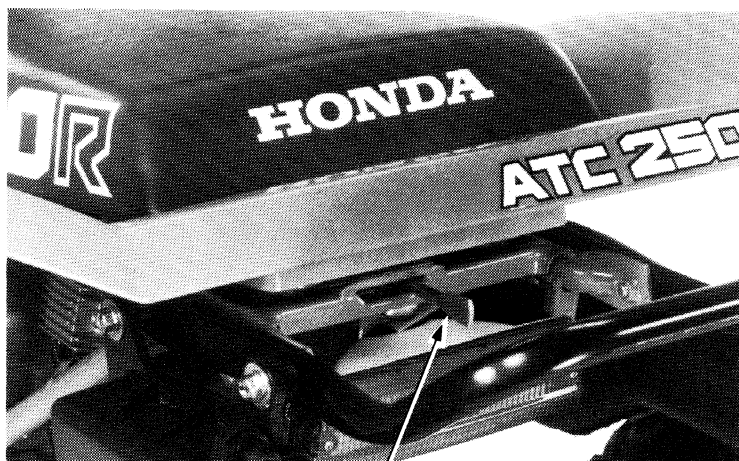

LATCH LEVER

Turn the fuel valve OFF and disconnect the fuel line.

Remove the fuel tank rear mounting bolts.
Remove the radiator shroud.

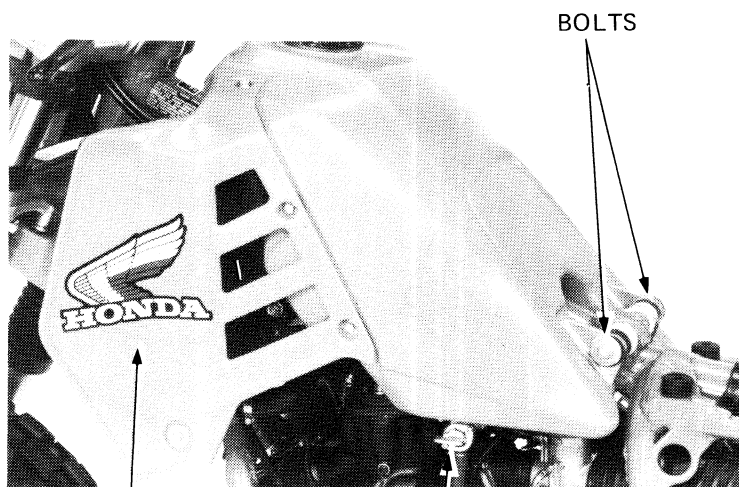RADIATOR
SHROUD

FUEL VALVE


BOLTS

Remove the fuel tank front mounting bolts, then remove the fuel tank.

WARNING

*Keep gasoline away from flames or sparks.
Wipe up spilled gasoline at once.*

Check that fuel flows freely from the fuel valve.
Remove the fuel valve and clean the filter if fuel flow is restricted.

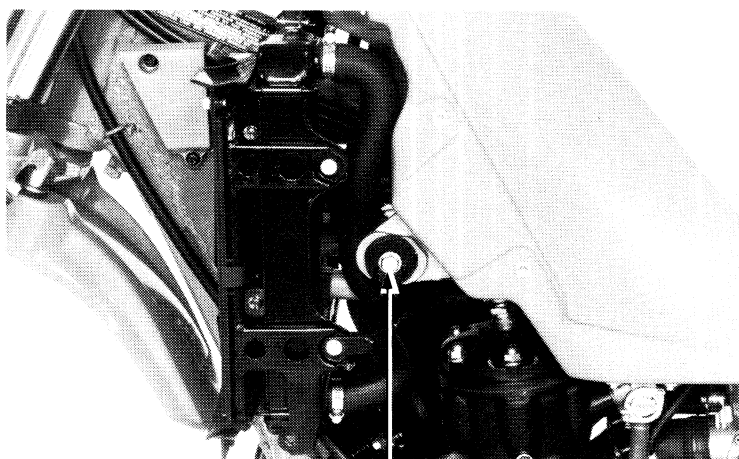

BOLT