


## AIR CLEANER CASE

### REMOVAL


Remove the seat/rear fender.

Remove the connecting tube bands, then remove the connecting tube.

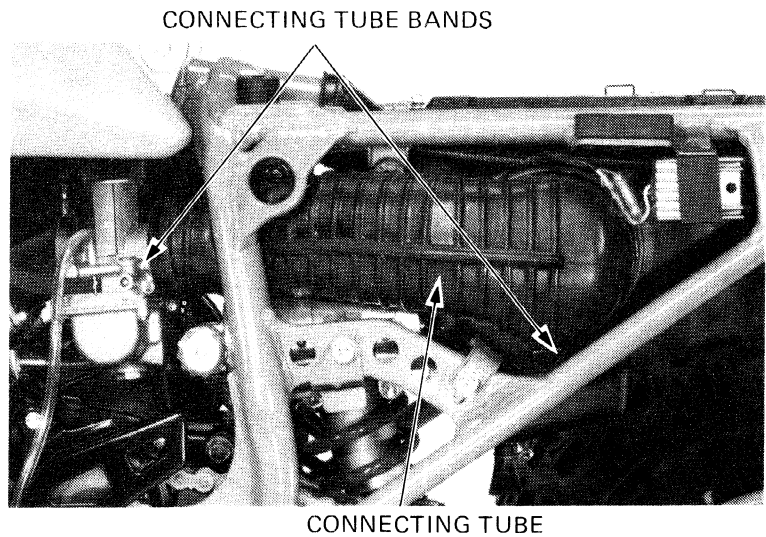

Remove the air cleaner case cover.

Remove the air cleaner case attaching bolts and loosen the connecting tube band.

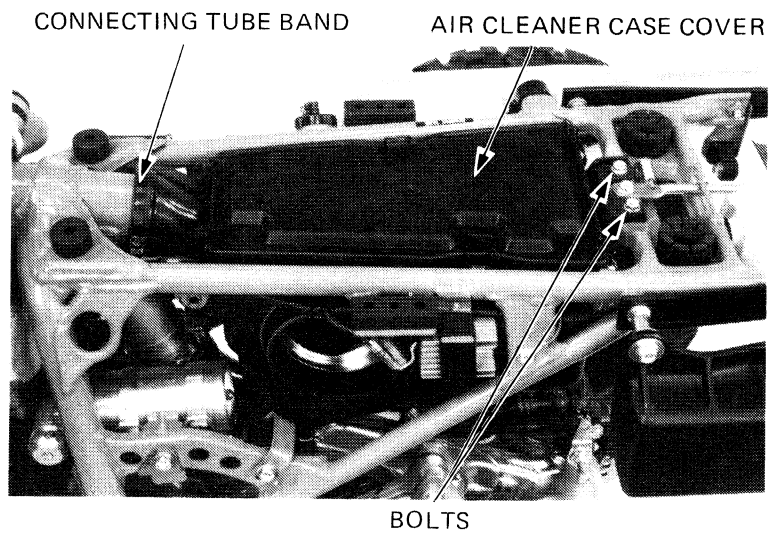

Remove the air cleaner case.

For air cleaner element service, see page 2-5.

