



Remove the starter lever.
 Unscrew the lock nut and remove the starter valve.
 Check the starter valve and valve seat for wear or damage.

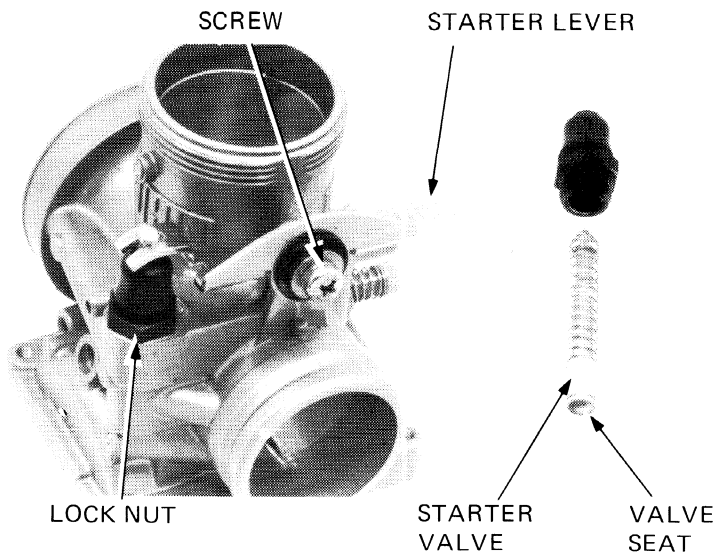

Blow open all jets and body openings with compressed air.

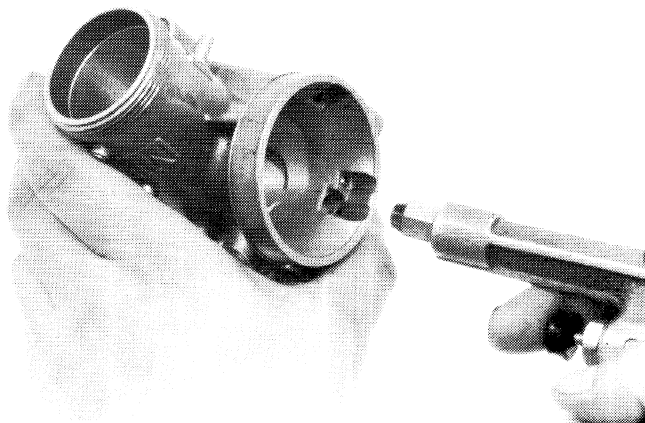

**CARBURETOR ASSEMBLY/
 INSTALLATION**

Carburetor Body

Install the starter valve and tighten the lock nut.
 Install the starter lever and collar, washer, spring washer, and screw.

