



FUEL SYSTEM

Install the air and throttle stop screws and return them to their original position as noted during removal.

AIR SCREW OPENING: 2 turns out

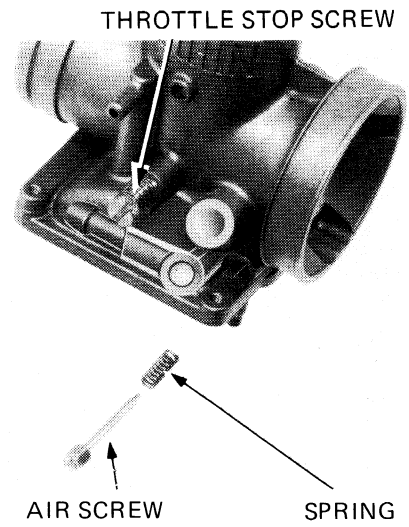

Install the baffle, slow jet, needle jet, main jet holder and main jet.

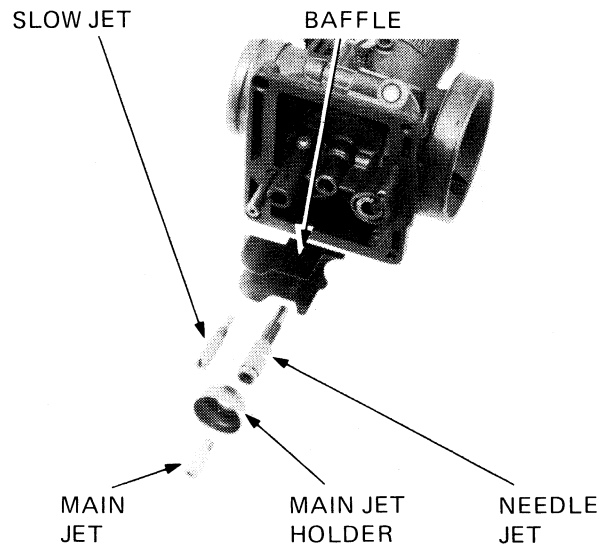

Install the float valve, float and float pin.
Check that the float is operating smoothly.

