


Push the cable holder in and turn it 90 degrees.


Then remove the cable holder and jet needle, set collar and set spring.

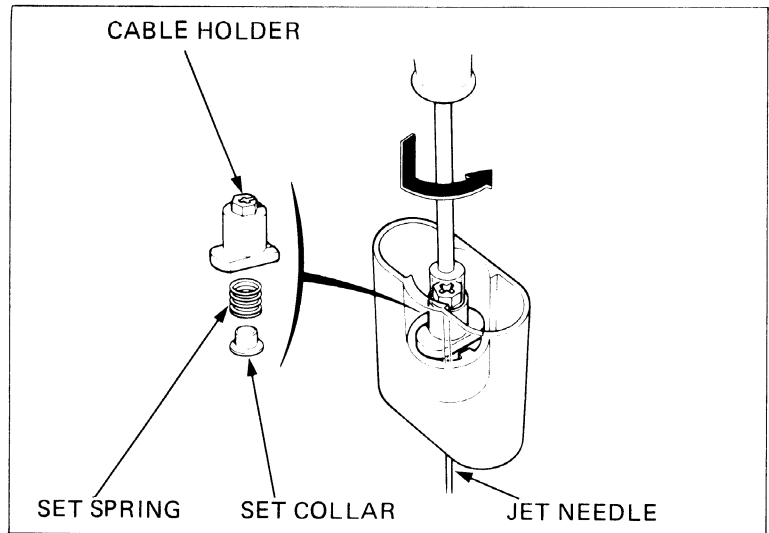

Remove the jet needle from the throttle valve.

Inspect the throttle valve and jet needle for dirt, scratches or wear.

Install the reverse order of removal.

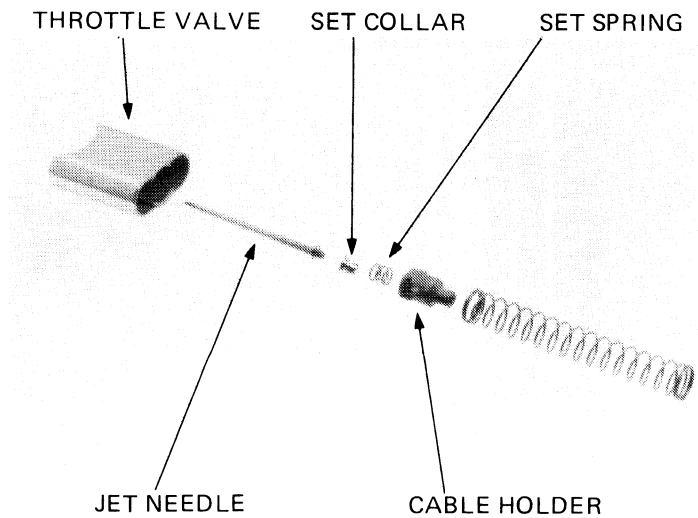

### Carburetor Body

Remove the float chamber attaching screws and remove the float chamber.

