


ENGINE REMOVAL/INSTALLATION

ENGINE REMOVAL

Remove the fuel tank and seat (Page 3-3).
Remove the carburetor ('85: Page 3-8, AFTER '85: 3-16).
Drain the radiator coolant (Page 9-3).
Loosen the drive chain (Page 2-10).
Remove the drive sprocket cover and remove the drive sprocket.

Disconnect the alternator coupler, and connectors. Disconnect the spark plug cap. Remove the gear shift pedal. Disconnect the clutch cable at its lower end.

ALTERNATOR COUPLER, CONNECTOR SPARK PLUG CAP

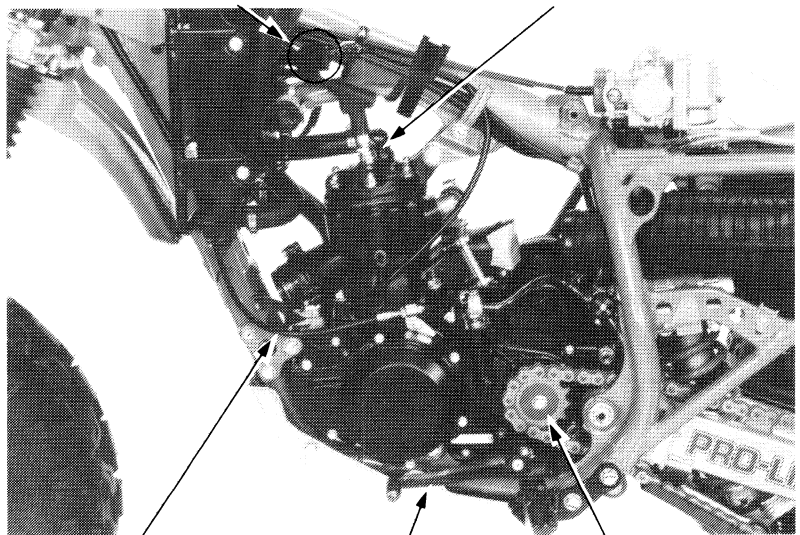

CLUTCH CABLE


GEARSHIFT PEDAL

DRIVE SPROCKET

Remove the kick starter pedal. Loosen the radiator hose bands and remove the hoses.

KICK STARTER PEDAL

RADIATOR HOSE (CYLINDER HEAD-TO-RADIATOR)

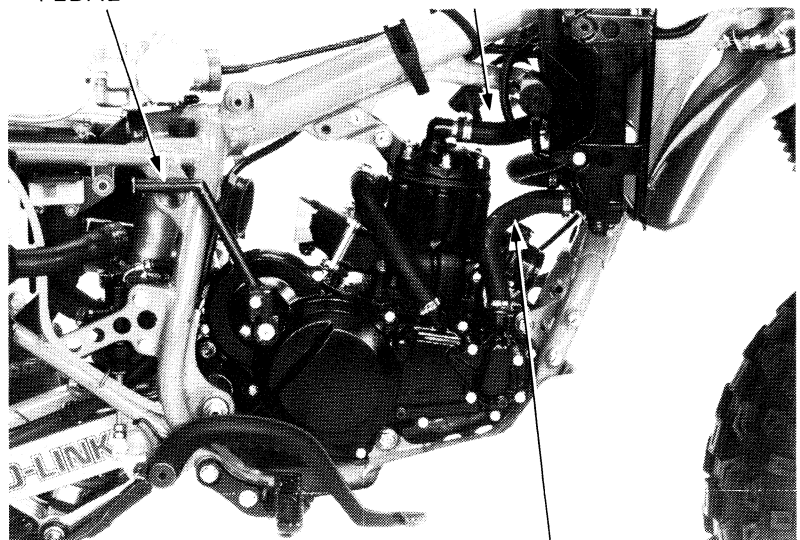

RADIATOR HOSE (RADIATOR-TO-WATER PUMP)