

## CYLINDER HEAD/CYLINDER/PISTON

---

Spread each piston ring and remove by lifting it up at a point just opposite the gap.


### CAUTION

*Do not damage the piston rings by spreading the ends too far.*



### INSPECTION

Remove the exhaust chamber joint pipe and reed valve.

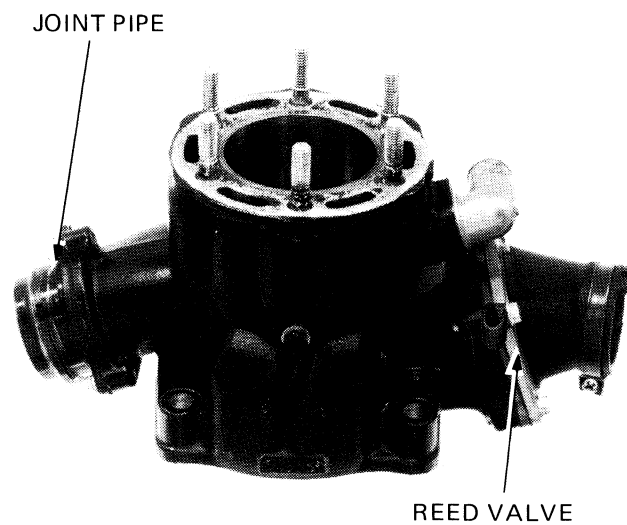

Remove the gasket material from the mating surface of the cylinder.

