


## CLUTCH

### RIGHT CRANKCASE COVER REMOVAL

Drain the transmission oil (Page 2-4).  
Remove the rear master cylinder mount bolts and brake pedal (Page 13-23).  
Remove the exhaust chamber (Page 14-3).  
Remove the kick starter pedal.  
Remove the right crankcase cover attaching bolts and remove the right crankcase cover.

#### NOTE

It is not necessary to drain radiator coolant when the water hose is not disconnected.

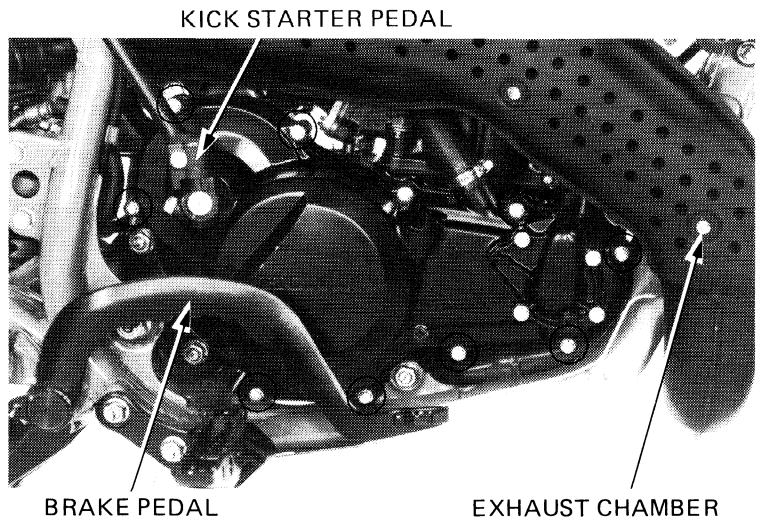


### CLUTCH DISASSEMBLY

Remove the gasket and two dowel pins.  
Remove the clutch spring bolts and clutch spring.

#### NOTE

Loosen the bolts in a criss-cross pattern in 2 or 3 progressive steps.

Remove the clutch pressure plate.

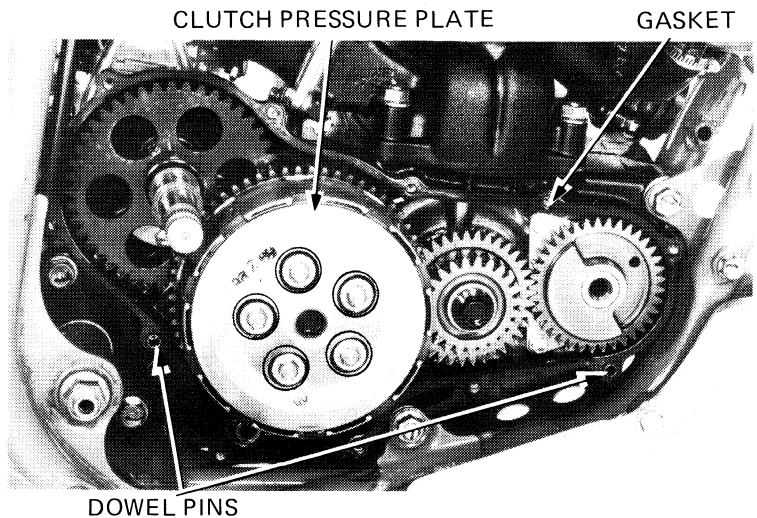

Remove the clutch lifter, steel ball.

#### NOTE

To avoid losing the steel ball, be careful when you remove the clutch lifter.

