



CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

Remove the clutch discs and clutch plates.

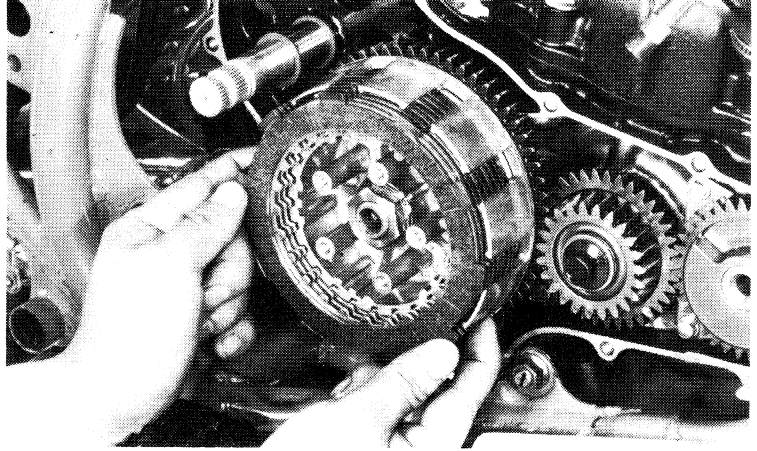

LOCK NUT WRENCH, 17 x 27 mm 07716-0020300 OR
EQUIVALENT COMMERCIALY AVAILABLE IN U.S.A.
EXTENSION BAR 00716-0020500


Straighten the tabs of the lock washer.
Hold the clutch center with the clutch center holder.
Remove the clutch center nut, lock washer and
plain washer.
Remove the clutch center.

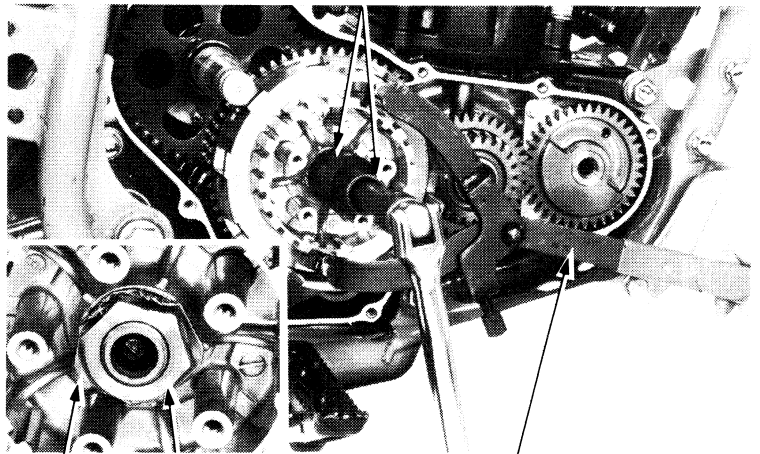

LOCK WASHER LOCK NUT

CLUTCH CENTER HOLDER
07724-0050000 OR
EQUIVALENT COMMERCIALY
AVAILABLE IN U.S.A.

Remove the washer and clutch outer.

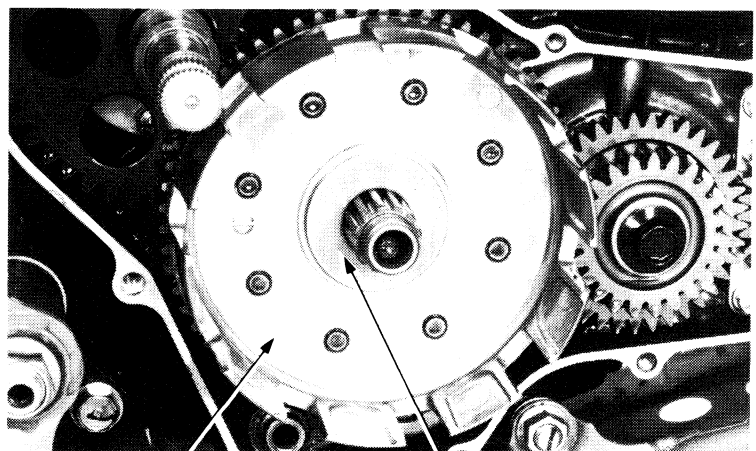

CLUTCH OUTER

WASHER