

## CLUTCH/GEARSHIFT LINKAGE/KICK STARTER


---

Replace the clutch discs if they show signs of scoring or discoloration.  
Measure the disc thickness.

**SERVICE LIMIT: 2.85 mm (0.112 in)**


### NOTE

Clutch discs and plates should be replaced as a set if any one is beyond the service limit.

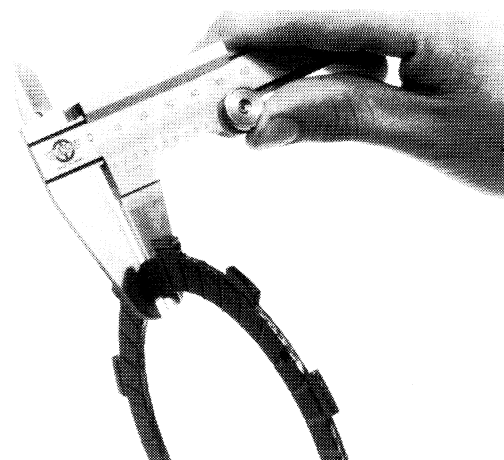

Check for plate warpage on a surface plate, using a feeler gauge.

**SERVICE LIMIT: 0.15 mm (0.006 in)**

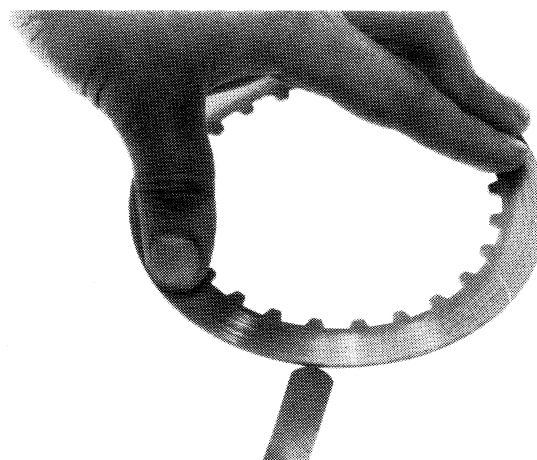

Check the slots in the clutch outer drum for nicks, cuts or indentations made by clutch discs.  
Check the clutch center for nicks, cuts or indentations made by clutch plates.

