


CLUTCH/GEARSHIFT LINKAGE/KICK STARTER


Check the starter idle gear and clutch outer guide for wear or damage.
Measure the clutch outer guide O.D.

SERVICE LIMIT: 27.97 mm (1.101 in)

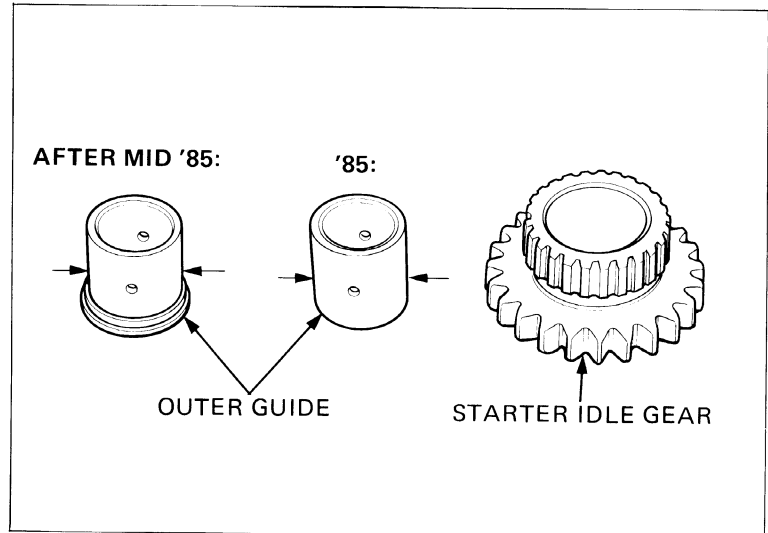

CLUTCH INSTALLATION

'85:
Install the thrust washer and clutch outer guide.
Install the needle bearings and spacer.

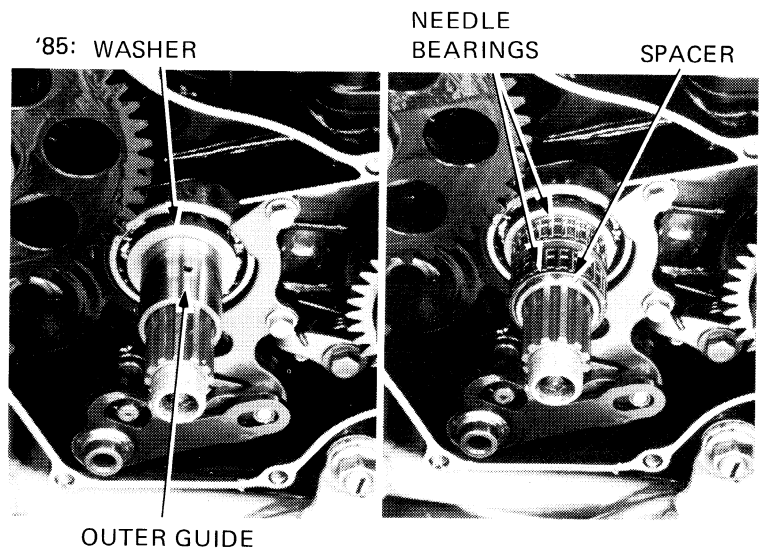

AFTER MID '85:
Install the clutch outer guide.
Install the needle bearing.

