



CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

Install the starter idle gear.

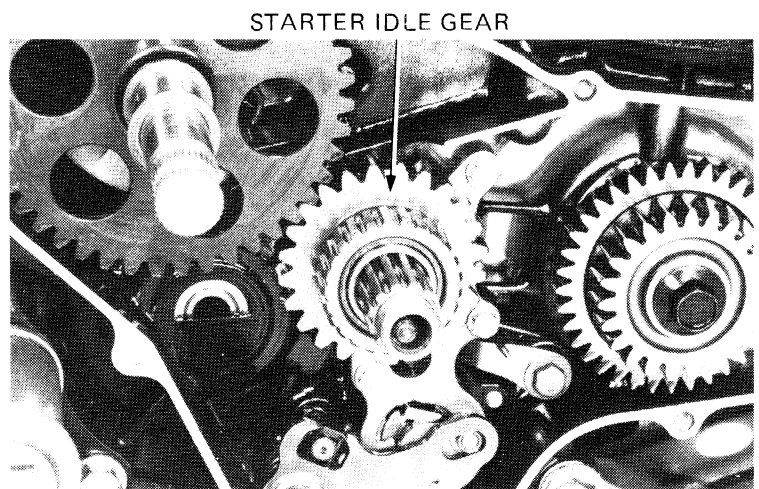

Install the clutch outer and washer.

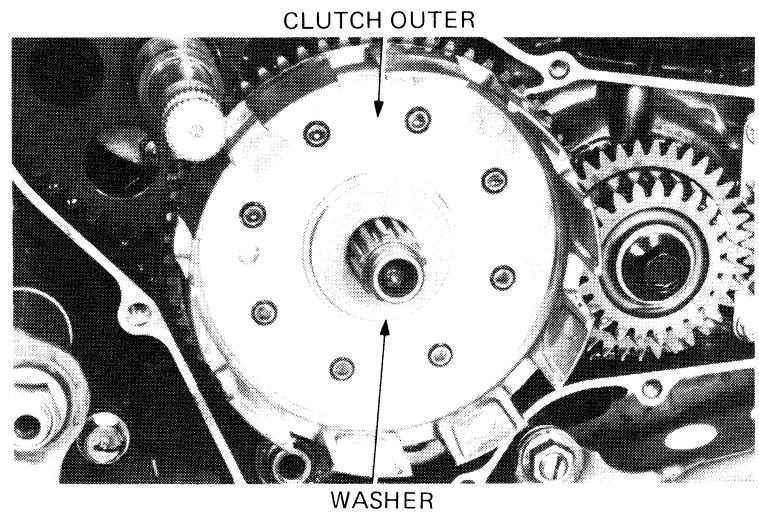

Install the clutch center.
Install the plain washer and a new lock washer.

NOTE

Align the tab of the lock washer with the groove of the clutch center.

