


CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

Install the clutch springs and bolts, and tighten to the specified torque.

NOTE


Tighten the clutch bolts in a criss-cross pattern in 2 or 3 progressive steps.

Install the new gasket and two dowel pins.

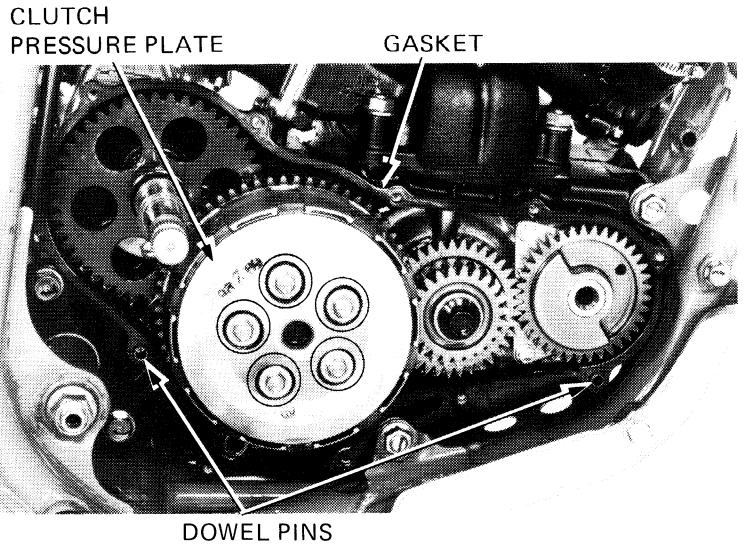

RIGHT CRANKCASE COVER INSTALLATION

Align the water pump drive shaft and groove on the water pump shaft.

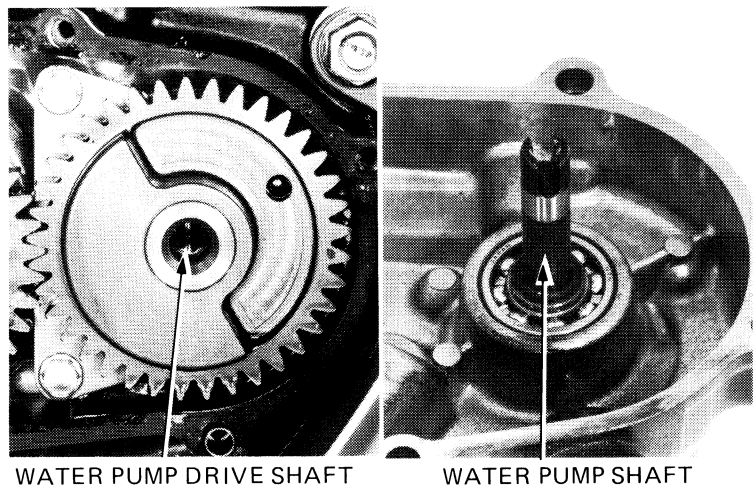

Install the followings:

- right crankcase cover.
- kick starter pedal.
- exhaust chamber (Page 14-3).
- rear master cylinder, and rear brake pedal (Page 13-23).

Fill the transmission oil (page 2-4).

