


## CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

---

### INSPECTION

Check the lifter rod for trueness by rolling it on a surface plate.


Replace the lifter rod with a new one, if it is bent.

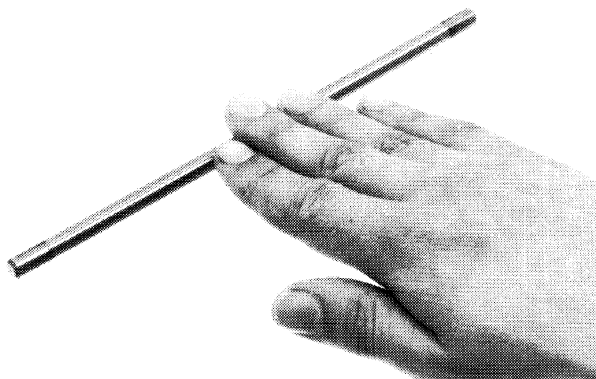

Check the lifter rod, lifter lever and lifter piece for wear or damage.

Repair or replace parts as necessary.

Install in the reverse order of removal.

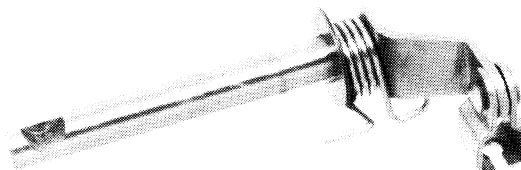

## SHIFT LINKAGE

### REMOVAL

Remove the followings:

- right crankcase cover (Page 7-3).
- clutch (Page 7-3).
- gearshift pedal.
- forward footpeg mounting bolt and loosen the rear mounting bolt.

