



Remove the gearshift spindle.

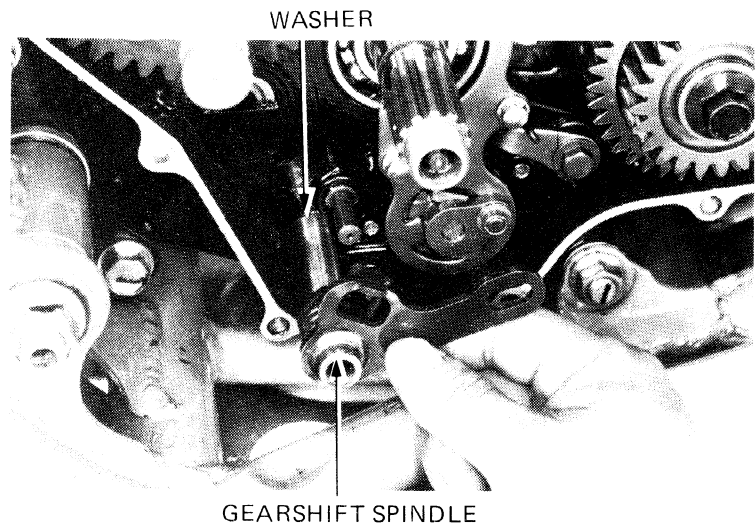

Remove the guide plate and drum shifter by removing the three mounting bolts.

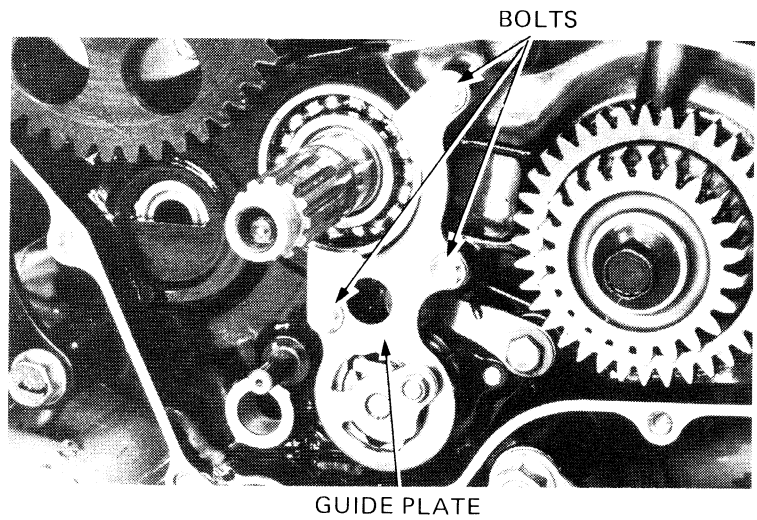

Remove the stopper arm bolt, stopper arm, stopper arm spring and thrust washer.
Remove the shift drum center pin, shift drum center and dowel pin.

