



CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

INSPECTION

Inspect the gearshift spindle for damage or wear.

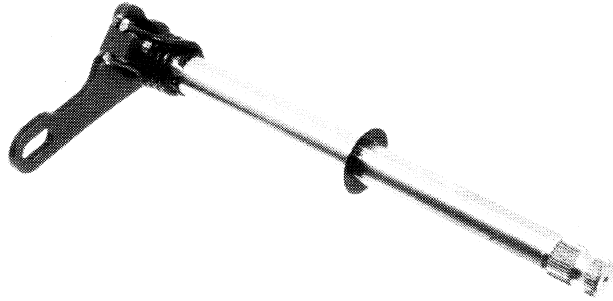

Inspect the stopper arm and spring for damage.
Inspect the gearshift spindle and return springs for damage.

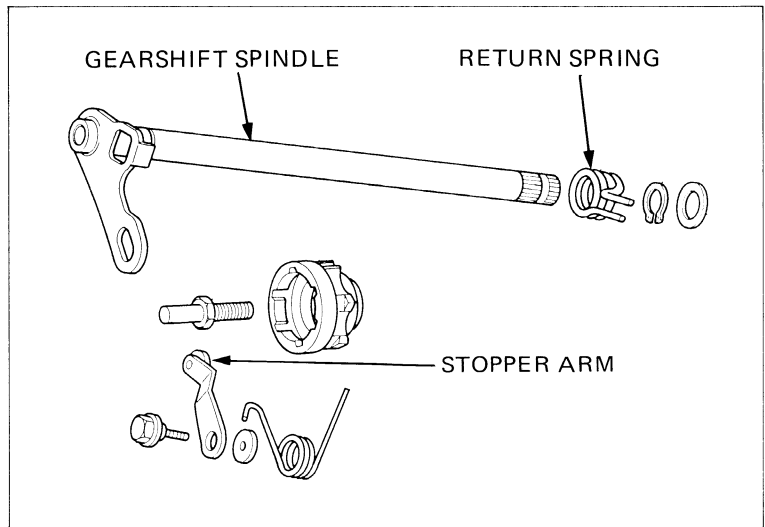

Check the ratchet pawls, springs, drum shifter and plungers for wear or damage.

Apply clean engine oil to the ratchet pawls, springs and drum shifter.

