



## CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

Remove the ratchet guide plate.

Install the kick starter pedal onto the kick starter spindle and remove the spindle by turning it clockwise with the pedal.

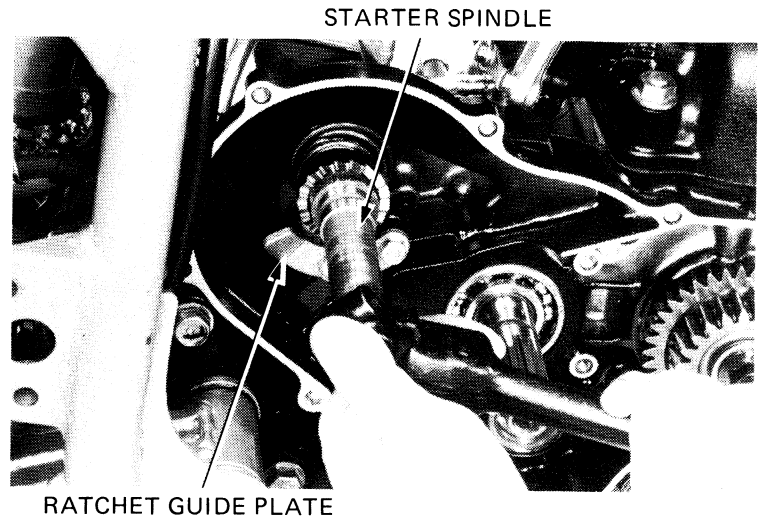

Remove the spring collar and return spring.

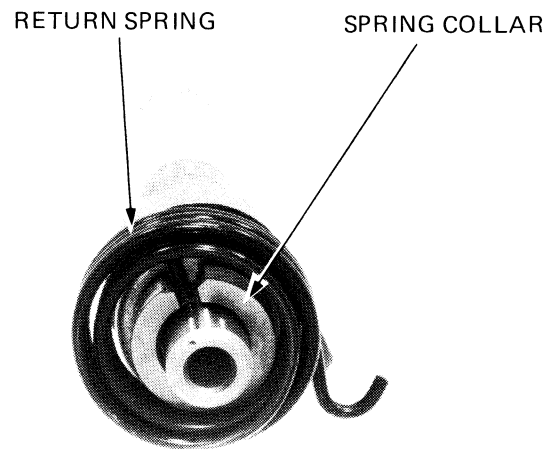

Remove the spring retainer, ratchet spring and starter ratchet.  
Remove the snap ring and thrust washer.

### INSPECTION

Measure the kick starter spindle O.D.

**SERVICE LIMIT: 21.94 mm (0.864 in)**

