


## CLUTCH/GEARSHIFT LINKAGE/KICK STARTER

Hook the return spring onto the crankcase.  
Install the kick starter pedal by turning the clock-wise.  
Push the starter ratchet and fit the starter ratchet to the ratchet guide.  
Install the ratchet guide plate.

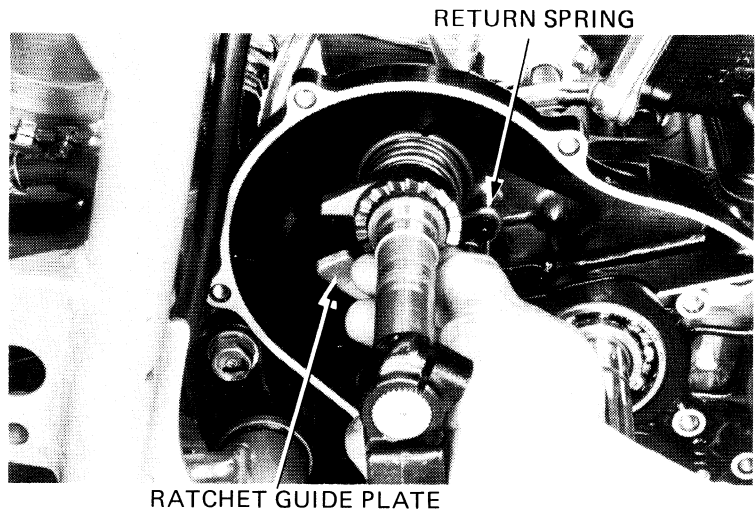

Install the starter pinion gear.  
Install the two washer and collar.  
Make sure the kick starter operates correctly.  
Install the clutch (Page 7-7).  
Install the right crankcase cover (Page 7-10).

