

## TRANSMISSION/CRANKSHAFT/BALANCER


---

### INSPECTION

Measure the crankshaft runout at the points indicated in the photograph.

**SERVICE LIMIT: 0.05 mm (0.002 in)**


Replace the crankshaft if the runout is larger than the service limit.

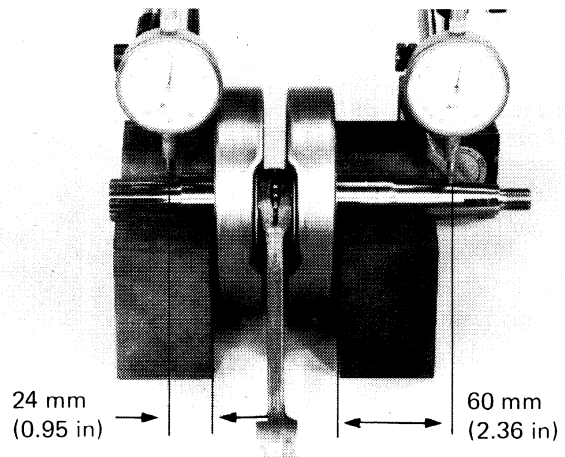

Measure the connecting rod big end side clearance.

**SERVICE LIMIT: 1.0 mm (0.04 in)**

Replace the crankshaft if the clearance is larger than the service limit.

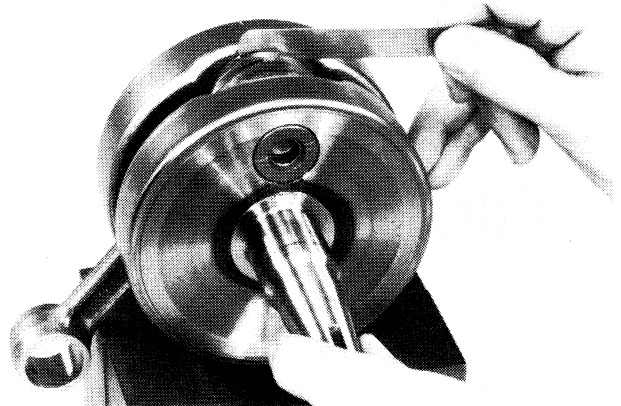

Measure the connecting rod big end radial clearance.

**SERVICE LIMIT: 0.04 mm (0.002 in)**

Replace the crankshaft if the clearance is larger than the service limit.

