

TRANSMISSION/CRANKSHAFT/BALANCER

Install the bearings into the right crankcase using the following tools:

Crankshaft bearing:

Driver	07749-0010000
Attachment, 62 x 68 mm	07746-0010500
Pilot, 28 mm	07746-0041100


Mainshaft bearing:

Driver	07749-0010000
Attachment, 52 x 55 mm	07746-0010400
Pilot, 25 mm	07746-0040600

Countershaft bearing:


Driver	07749-0010000
Attachment, 37 x 40 mm	07746-0010200

Install the shift drum bearing into the right crankcase and secure it with the bearing holder plates and bolts.

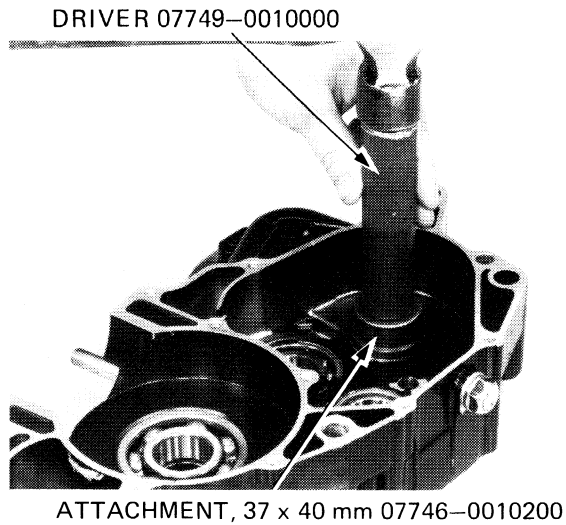

LEFT CRANKCASE

The bearings must be replaced if they are noisy or have excessive play.

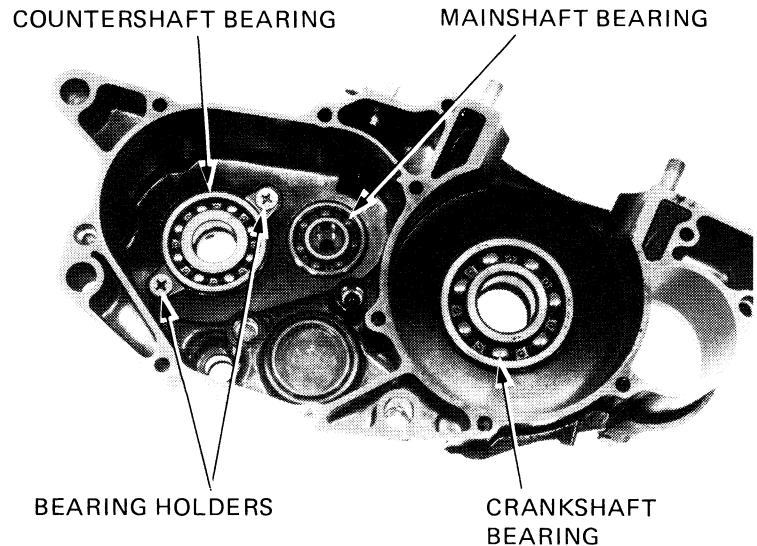

Remove the crankshaft oil seal and drive out the bearing.

Remove the mainshaft bearing with the bearing remover.

Remove the countershaft collar and oil seal.

Remove the countershaft bearing holder plates by removing the screws and drive out the bearing.

